




D61B / D61E / G111E

GAS HOUSING / BURNER ASSEMBLY

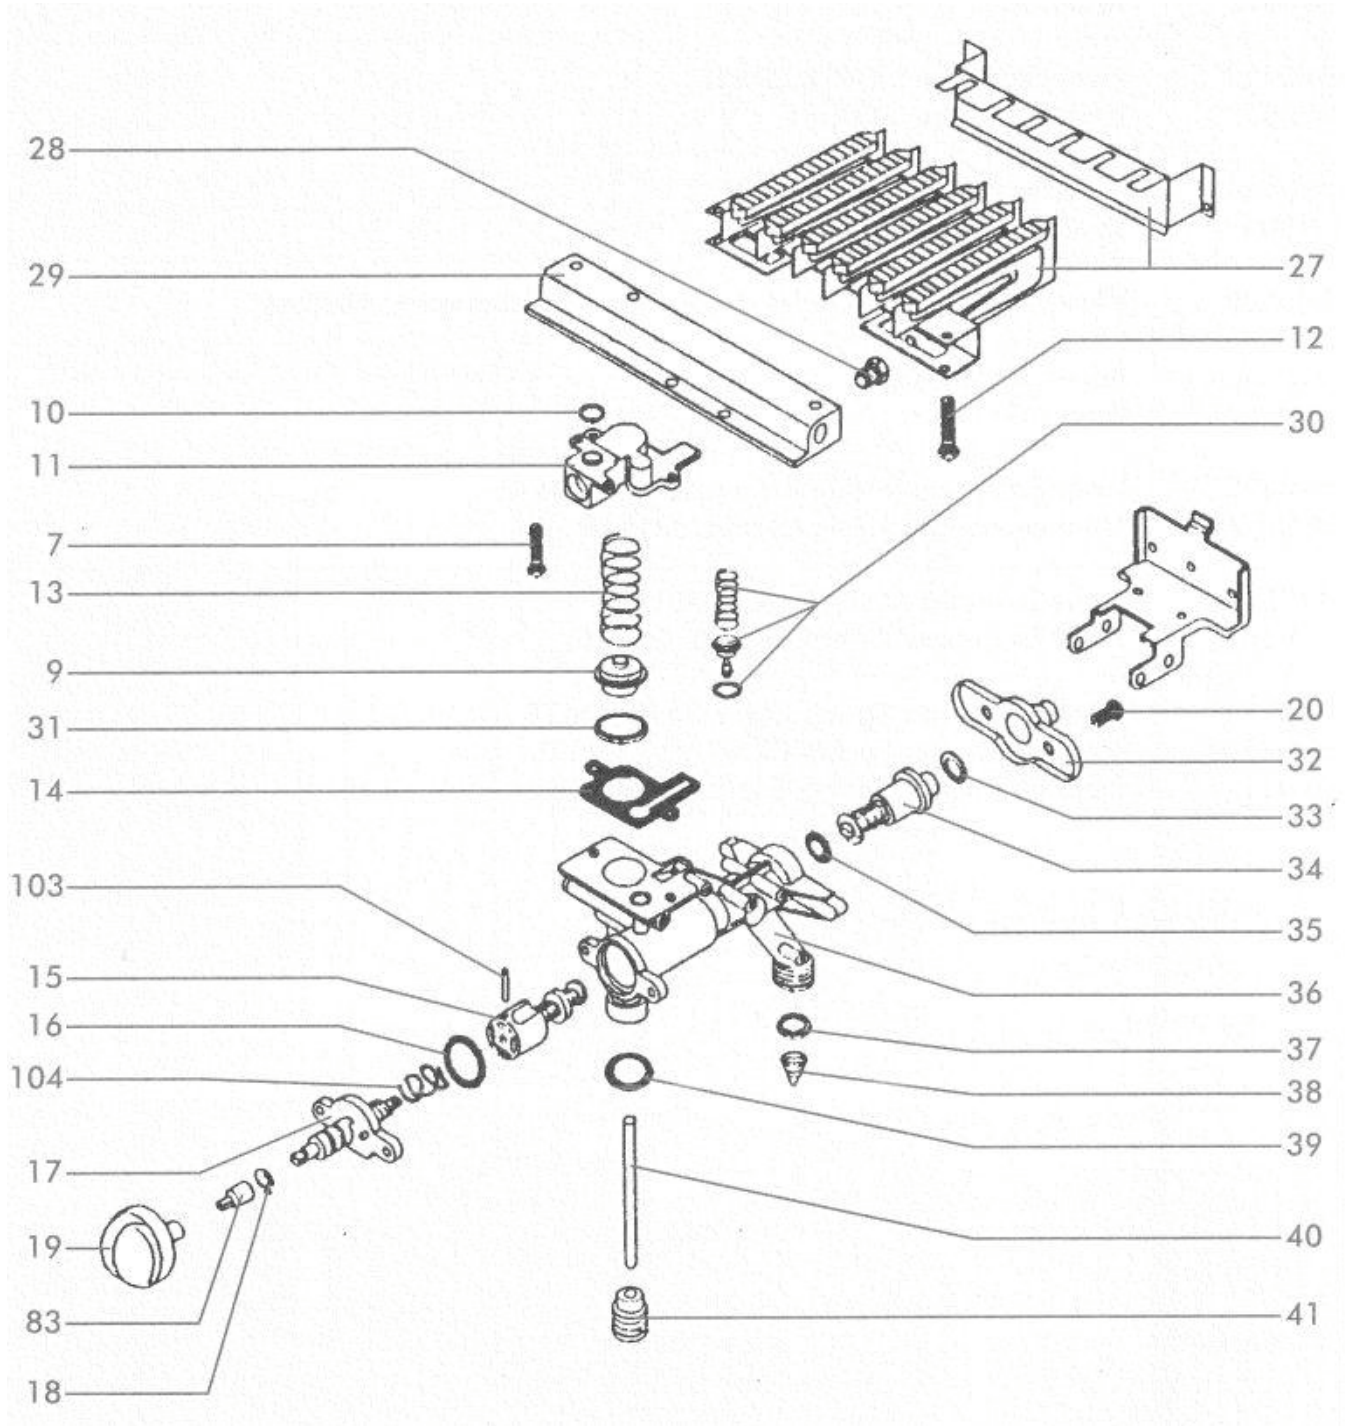

PARTS LIST

LABEL No.	PART No.	DESCRIPTION
7	FW0560	SCREW
9	FW0405	MAIN GAS VALVE DISC
10	FW0531	CORK WASHER
11	FW0065	GAS ASSEMBLY COVER..D61B..D61E
	FW0066	GAS ASSEMBLY COVER..G111E
12	FW0561	SCREW
13	FW0396	MAIN GAS VALVE SPRING
14	FW0533	GASKET
15	FW0075	GAS VALVE SPINDLE ASSY..D61B..D61E
	FW0076	GAS VALVE SPINDLE ASSY..G111E
16	FW0534	O RING
17	FW0085	PIEZO SPINDLE ASSY..D61B
	FW0086	GAS CONTROLSPINDLE..D61E..G111E
18	FW0563	PIEZO IGNITER RETAINING CIR-CLIP
19	FW0096	GAS & WATER CONTRIOL KNOB..WHITE..D61B
	FW0097	GAS CONTROL KNOB GREY..D61E..G111E
	FW0098	WATER CONTROL KNOB GREY..D61E..G111E
20	FW0562	SCREW
27	FW0115	MAIN BURNER..D61B..D61E
	FW0113	MAIN BURNER..G111E
28	FW0126	MAIN BURNER INJECTOR (JET)
29	FW0135	BURNER BAR..D61B..D61E
	FW0137	BURNER BAR..G111E
30	FW0341	PILOT VALVE KIT
31	FW0536	MAIN GAS VALVE DISC
32	FW0410	MAGNETIC VALVE COVER PLATE
33	FW0537	BRASS WASHER
34	FW0350	MAGNETIC VALVE WITH BRASS&NYLON WASHER
35	FW0538	WASHER
36	FW0151	MAIN GAS HOUSING..(BODY ONLY)
37	FW0539	MAIN GAS INLET WASHER
38	FW0355	GAS FILTER
39	FW0540	GAS VALVE PUSH ROD O'RING
40	FW0360	GAS VALVE PUSH ROD
41	FW0365	PUSH ROD GUIDE SCREW
83	FW0241	GAS SPINDLE EXTENSION..G111E
103	FW0567	ROLL PIN
104	FW0568	SPRING