


# C400 Holding Tank

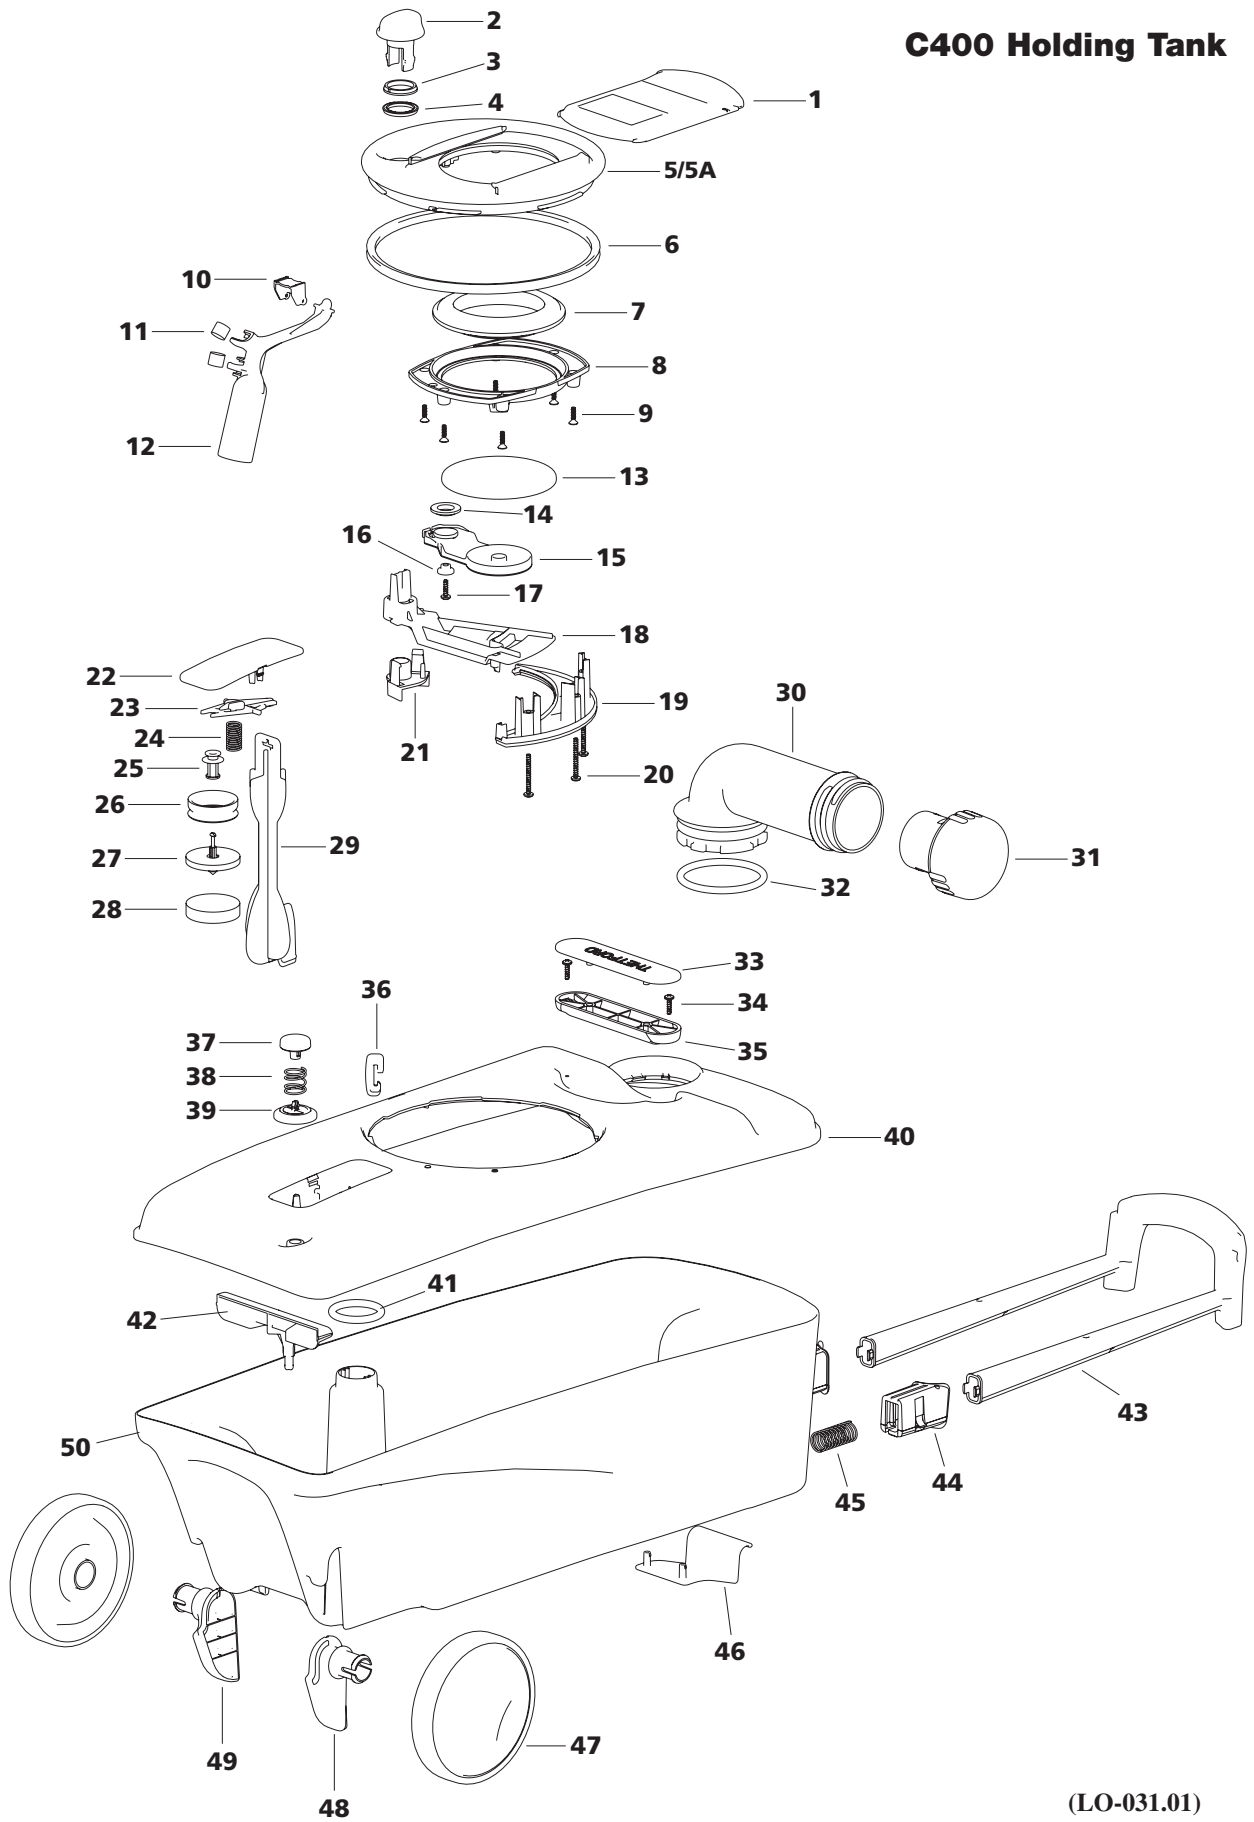

(LO-031.01)

## C-400 HOLDING TANK (LO-064.01)

	Single spare part number	Assembly spare part number	Available in colour number
1. Slidingcover		21301-06	
2. Blade opener		32302-06	
3. Washer			
4. Seal parker			
5. Holding tank plate L*		32302-06	
5A. Holding tank plate R*		32328-06	
6. Seal mechanism		32303	
7. Lipseal	23721		
8. Seal plate			
9. Screw			
10. Retainer			
11. Magnet		32304	
12. Float arm			
13. Blade			
14. Bearing plate			
15. Blade arm			
16. Bushing mechanism			
17. Screw			
18. Blade driver			
19. Support track			
20. Screw			
21. Mechanism retainer			
22. Vent lid			
23. Vent lifter			
24. Vent spring			

Cassette

\* SC 400 Holdingtank meachnisme L 32332-06 (number 2 until 21)

\* SC 400 Holdingtank mechanisme R 32331-06 (number 2 until 21)

## C-400 HOLDING TANK (LO-065.01)

	Single spare part number	Assembly spar part number	Available in colour number
<b>25.</b> Vent pivot			
<b>26.</b> Vent seal		32305	
<b>27.</b> Float stem			
<b>28.</b> Float			
<hr/>			
<b>29.</b> Vent actuator			
<hr/>			
<b>30.</b> Pour out spout			
<b>31.</b> Measuring cup (assy)		32306	06
<b>32.</b> O-ring	25810-16		
<hr/>			
<b>33.</b> Handle cover			
<b>34.</b> Screw			
<b>35.</b> Handle			
<b>36.</b> Vent clip			
<hr/>			
<b>37.</b> Vent button			
<b>38.</b> Vent spring		32307	16
<b>39.</b> Vent seal			
<hr/>			
<b>40.</b> Holding tank upper			
<b>41.</b> O-ring			
<b>42.</b> Wheel support bracket			
<b>43.</b> Pull handle			
<b>44.</b> Pull handle bushing right			
Pull handle bushing left			
<b>45.</b> Pull handle spring			
<b>46.</b> Tank lock clip			
<hr/>			
<b>47.</b> Wheel			
<b>48.</b> Wheel bearing right		32308	06
<b>49.</b> Wheel bearing left			
<hr/>			
<b>50.</b> Holding tank lower			
Holding tank complete RH		32327	06
Holding tank complete LH		32326	06