



N175 Exploded Drawings and Spares Lists

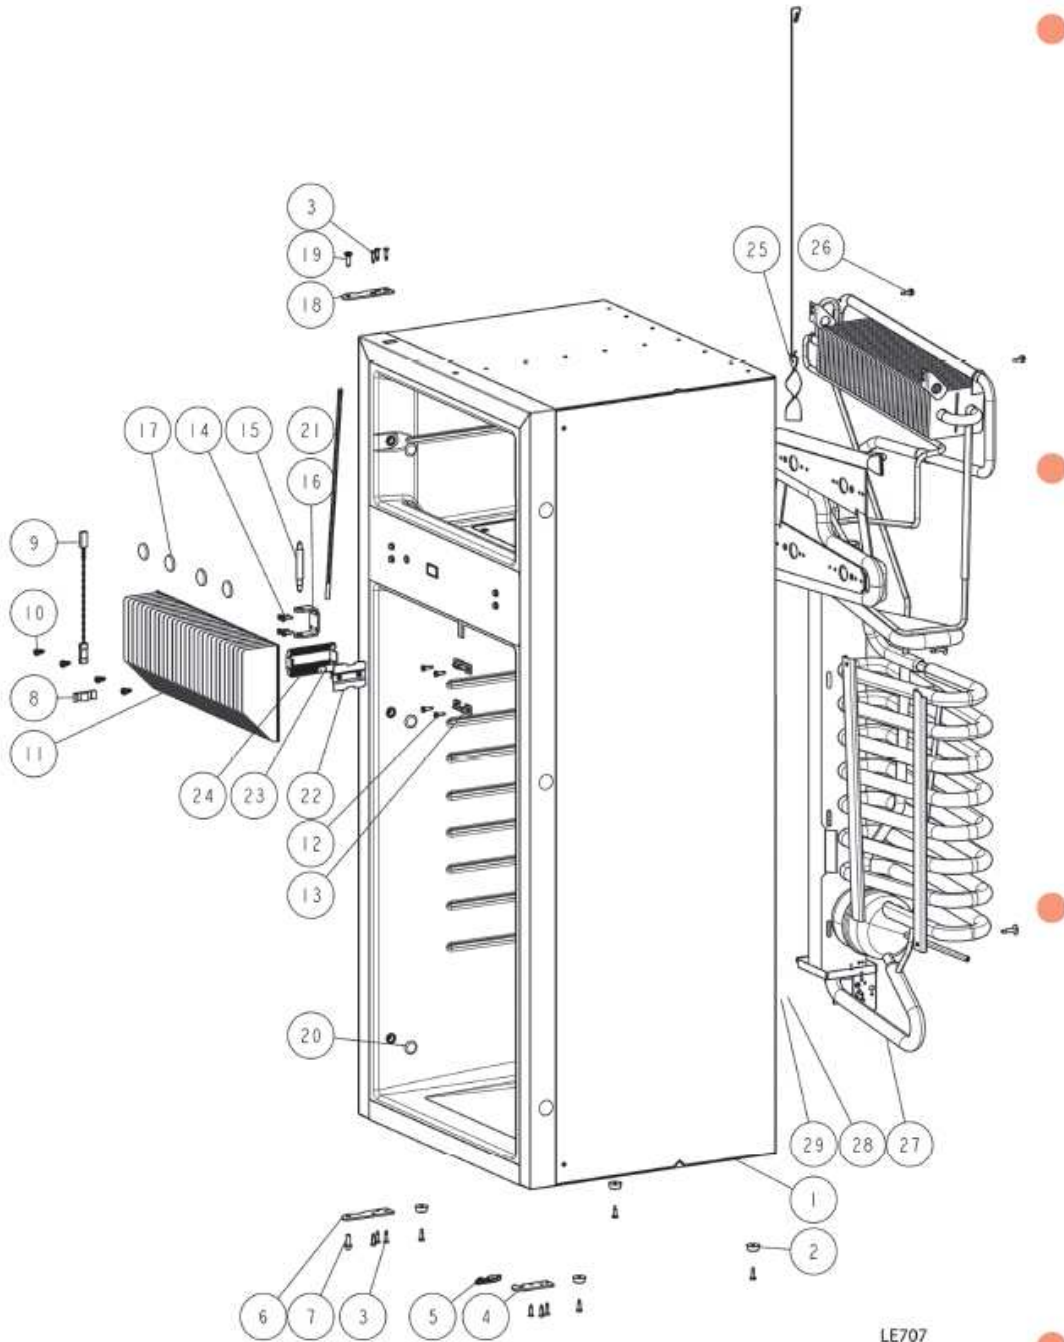

LE707

Cabinet and cooling unit N175 (LE-707)**Spare part number**

1.	Cabinet	
2.	Foot (4x)	
3.	Screw* (9x)	
4.	Bottom latch plate*	
5.	Latch bottom*	624001-27
6.	Hinge plate	
7.	Hinge pin bottom/washer	
8.	Fin clip	623059
9.	Thermistor	623077
10.	Screw (4x)	
11.	Fin Drain plate	631190
12.	Screw (4x)	
13.	Strike plate (2x)	
14.	Screw (4x)	
15.	Hinge center pin	
16.	Hinge center bracket	
17.	Cap freezer bolt (4x)	624479-08
18.	Hinge plate	
19.	Hinge pin top/washer	
20.	Cap (6x)	623622-08
21.	Interior light switch	623061
22.	Light bracket	
23.	Interior light bulb	624003
24.	Interior light cover	624002
25.	Heat diffuser	
26.	Screw (2x)	
27.	Cooling unit	
28.	Heater AC	626992
29.	Heater DC (produced between May '07 - December 4 th '07)	626993
	Heater DC (produced between December 5 th '07 - March 16 th '07)	631751
	Heater DC (produced as from March 17 th '08)	631752

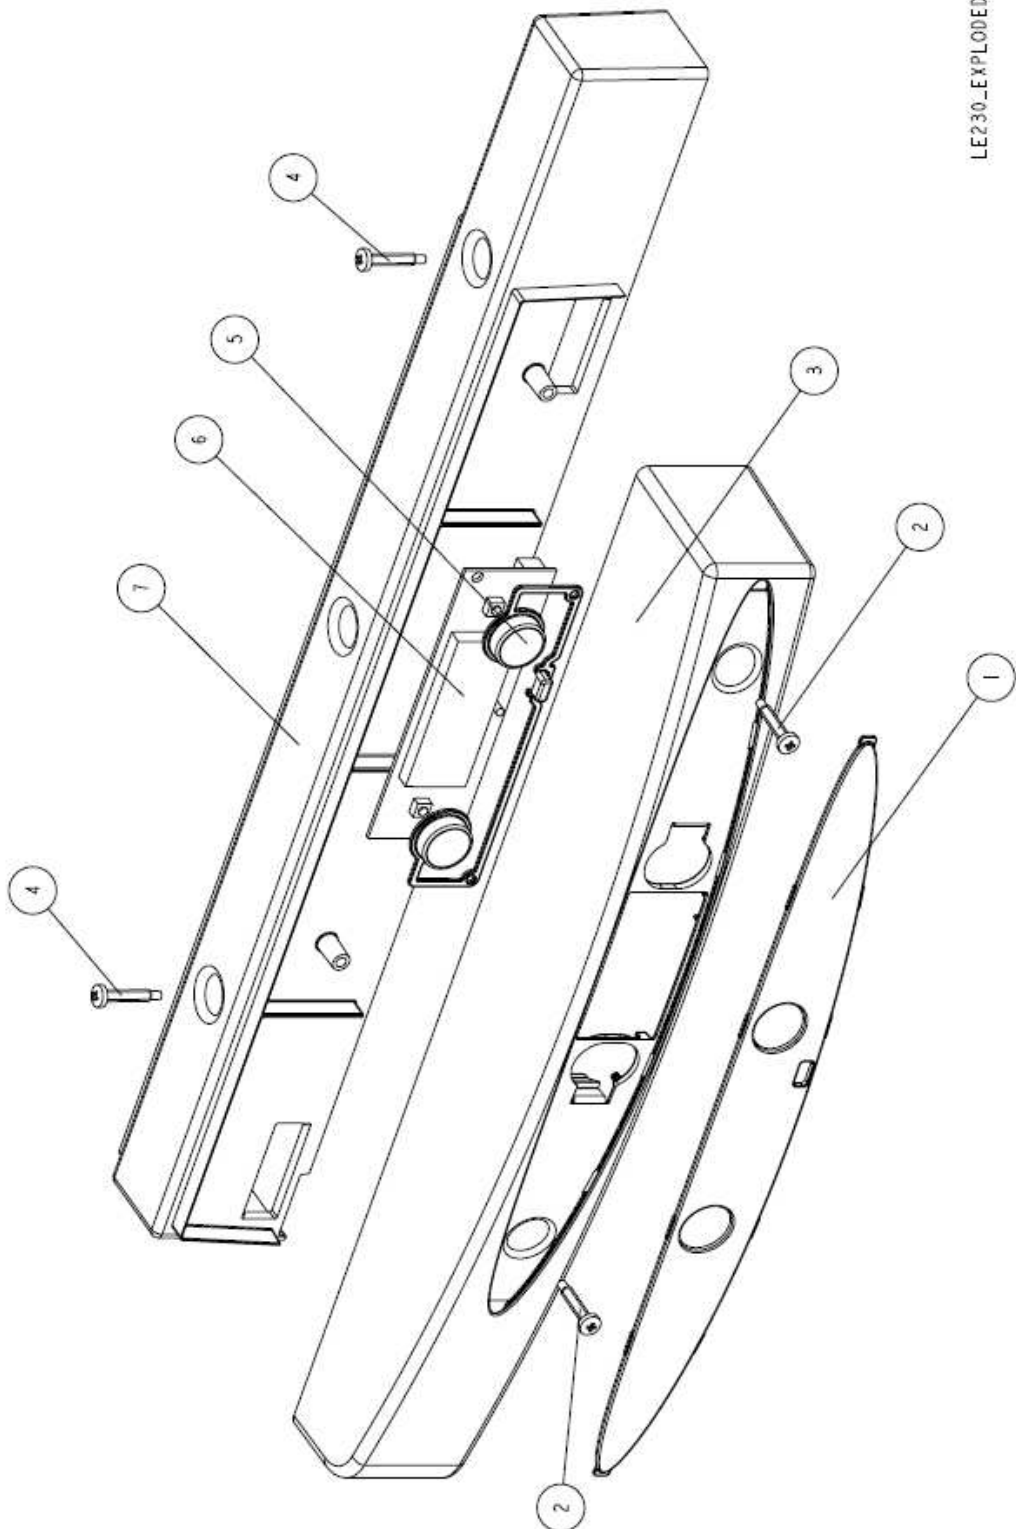

LE230_EXPLODED

Controls LCD Curved (LE-230)**Spare part number**

1. Overlay LCD EES (electric)
Overlay LCD SES (automatic)

626975
631737

2. Screw

3. Control panel LCD curved

626973-07

4. Screw


5. Push buttons

6. Display board LCD

626972

7. Mounting box*

* **Not for all models**

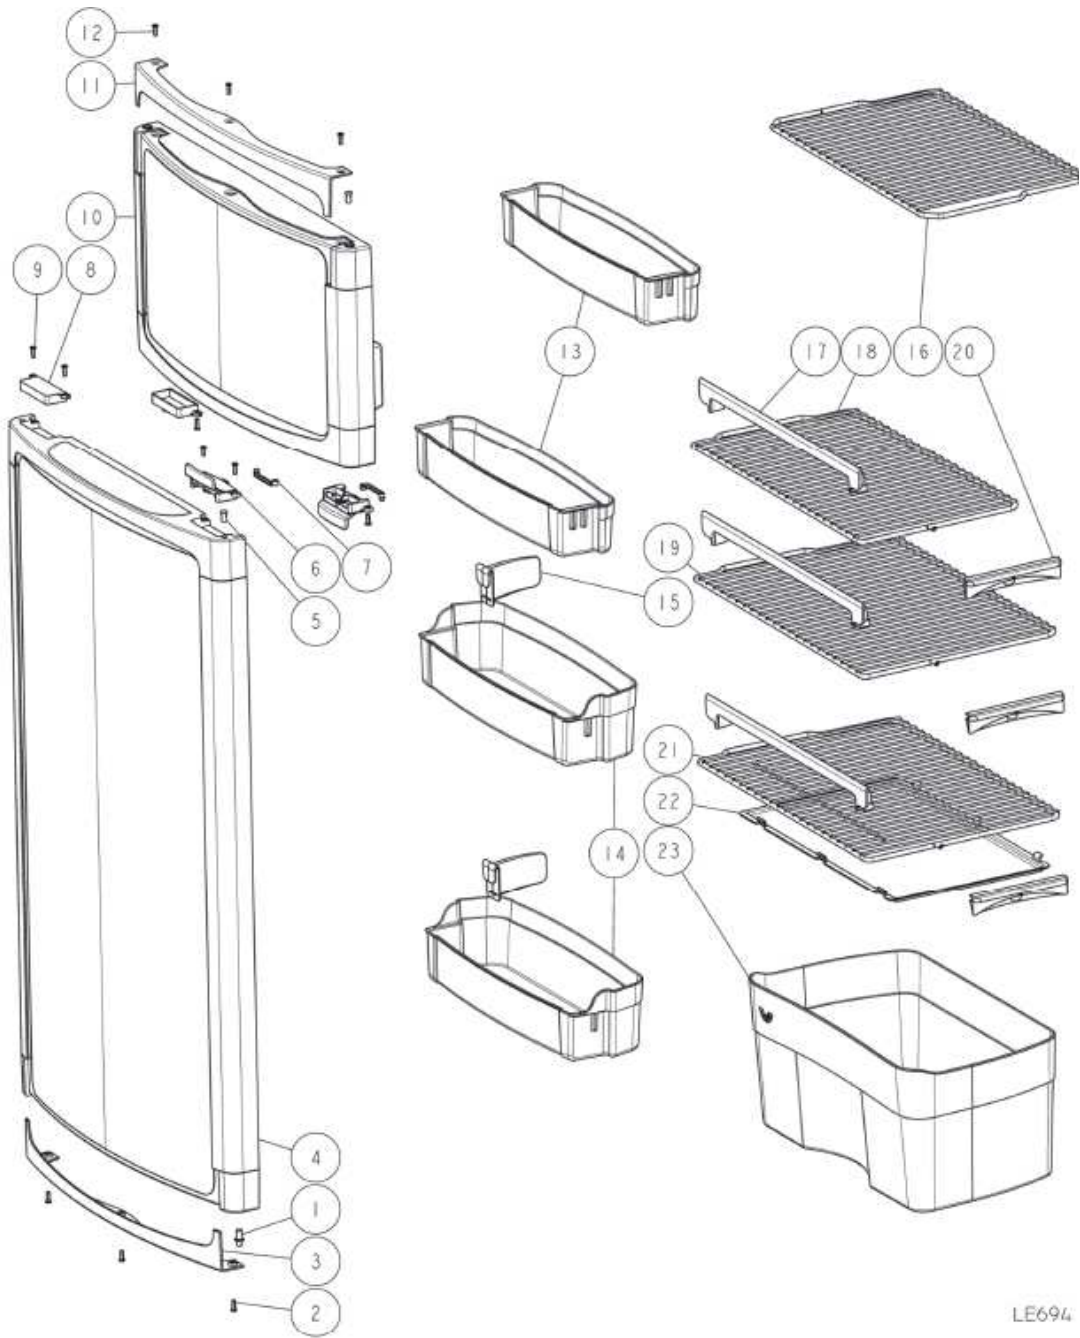

LE694

Door and cabinet N175 (LE-694)**Spare part number**

1.	Bottom latch pin*	
2.	Screw (3x)	
3.	Panel retainer	
4.	Door curved double cab.	626982-07
5.	Hinge hole plug (2x)	
6.	Latch V2 (2x)	626985-07
7.	Storage strap (2x)	626986-07
8.	Pocket cover (2x)	
9.	Screw (8x)	
10.	Door curved double fr.	626983-07
11.	Panel retainer	
12.	Screw (3x)	
13.	Doorbin (2x)	626976-12
14.	Doorbin (2x)	626977-12
15.	Bottle retainer	626989-12
16.	Shelf	631741-08
17.	Shelf food retainer	624457-08
18.	Shelf	631742-08
19.	Shelf	631743-08
20.	Clip shelf large (3x)	623625-08
21.	Shelf	631744-08
22.	Shelf tray insert	626981-12
23.	Vegetable bin	631745-08