



## Rastrollo 2000

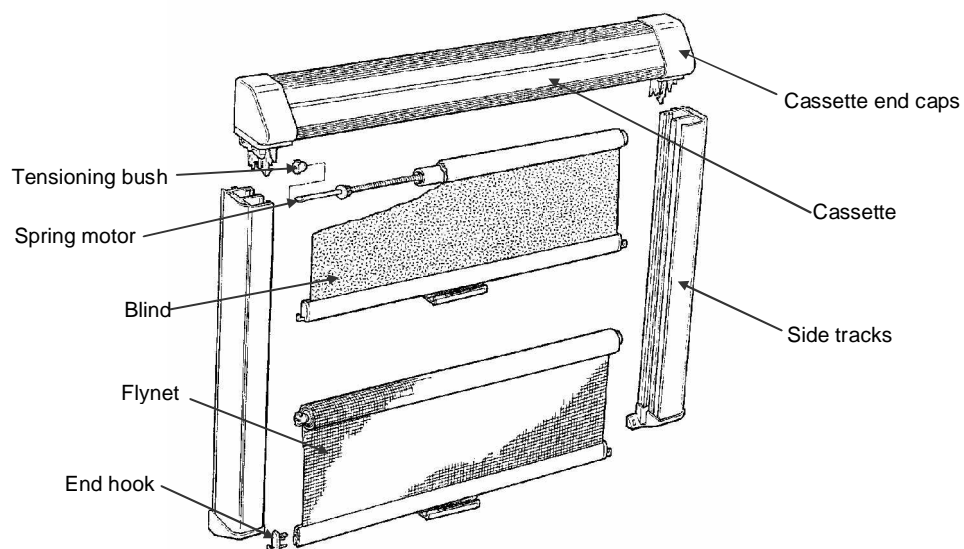

### PROBLEM DESCRIPTION :

- Defective spring motor
- Exchanging blind or flynet
- Rollo does not retract fully to the end position
- Exchanging the end hooks

## Defective spring motor

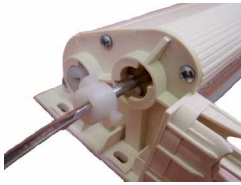

Remove the end caps from the cassette and unwind the spring motor using a screwdriver. Turn the tensioning bush clockwise until it cannot be turned further and pull outwards carefully.

Attention! Risk of injury resulting from the spring jumping out or recoiling uncontrollably.



until it cannot be

Press the spring shaft back in the cassette with your finger or pliers and remove the rollos. Pull out the spring motor from the grooved tube and insert the new spring motor, insert blind in the cassette, place the tensioning bush and wind according to the winding rule below. Place the tensioning bush in its housing and turn in an anti-clockwise direction turned further.

Winding rule: Tube length in mm/100 +3= revolutions of the spring shaft

Example: Tube length =1000mm  $1000\text{mm}/100+3= 13$  i.e.13 revolutions in a clockwise direction

## Exchanging blind or flynet

Remove Rollo as per defective spring motor and exchange corresponding Rollo. Re-assemble in reverse order.

Rollos do not retract fully to the end position

Check Rollo tension according to the winding rule and rewind.

If rollos still do not run properly check spring motor and change if necessary.

## Exchanging the end hooks



By using a screwdriver for leverage remove the end hooks and exchange. In order to attach the end hooks please use instant glue. Should the end hooks get broken during removal and remain in the end bar, they are to be removed by using a screwdriver.