



LE441_C250-C260-WHT_1114-V03

| | | Spare part number | Spare part number | Spare part number | Colours available |
|----|---------------------------------------------------------------|-------------------|-------------------|----------------------------------------------|-------------------|
| 1 | Blade opener | | | | |
| 2 | Seal | | 23743 | | 92 |
| 3 | Washer | | | | |
| 4 | Waste-holding tank plate | 50723 | | | 06 |
| 5 | Seal mechanism | 50724 | | | |
| 6 | Lip seal | 23721 | | | |
| 7 | Blade arm driver | | | 50727 waste- holding tank mechanism | 06 |
| 8 | Blade | 50731 | | | |
| 9 | Screw | | | | |
| 10 | Sliding cover | 50718 | | | |
| 11 | Bearing plate | | | | |
| 12 | Blade arm | | | | |
| 13 | Bushing/screw | | | | |
| 14 | Support track | | | | |
| 15 | Retainer mechanism | | | | |
| 16 | Vent lid | 50741 | | | 06 |
| 17 | Blade driver | | | | |
| 18 | Screw | | | | |
| 19 | Vent button | | | | |
| 20 | Spring | | 07524 | | 92 |
| 21 | Vent seal | | | | |
| 22 | Vent lifter | | | | |
| 23 | Vent pivot | | | | |
| 24 | Vent spring | | | | |
| 25 | Seal vent | 21528 | 50732 | | |
| 26 | Float stem | | | | |
| 27 | Float | 50725 | | | |
| 28 | Measuring cup | 25810 | | | 06 |
| 29 | Pour out spout | | 50719 | | 92 |
| 30 | O-ring | | | | |
| 31 | Waste-holding tank complete <i>including sliding cover</i> | | 50700 | 50701 <i>pump out system</i> | 06 |
| 32 | Wheels 2X | 50726 | | | |
| 33 | Vent actuator | | | | |
| 34 | Guide | 50738 | | | 06 |
| 35 | Bracket | | | | |
| 36 | Telescopic system | | 50728 | | |
| 37 | Vent spring | | | | |
| 38 | Handle grip | | | | 92 |
| 39 | Handle cover | 50737 | | | |

| | | Spare part number | Spare part number | Spare part number | Colours available |
|--------------------------------------------------------|---------------------------|-------------------|-------------------|-------------------|-------------------|
| Pump out system - spare parts & accessories | | | | | |
| <i>Only for S-models</i> | | | | | |
| 40 | Waste-holding tank cover | 50742 | | | 06 |
| 41 | Waste-holding tank insert | 50743 | | | 06 |
| 42 | Seal | 50749 | 50745 | 50747 | 06 |
| 43 | Seal | | | | |
| 44 | Tube connection | | | | |
| 45 | Base | | | | 06 |
| 46 | Base cover | | | | |
| 47 | Clicker | | 50744 | | 06 |
| 48 | Spring | | | | |
| 49 | Level indicator pump out | 50746 | | | 06 |
| 50 | Pump | 50748 | | | |