 


# MODEL =      **RM4200 / 4201**

## POPULAR SPARE PARTS

 
		<u>LEISURE SPARES PART NUMBER</u>
<u>CABINET</u>		
	UPPER SHELF	= IC10353
	LOWER SHELF	= 2951016050
	FREEZER DOOR	= IC10341C
	FREEZER DOOR HINGES	= NOT APPLICABLE
<u>DOOR</u>		
	TRAVEL CATCH	= TR10415
	UPPER SHELF	= IC10343
	MIDDLE SHELF (FULL WIDTH)	= NOT APPLICABLE
	HANGING DOOR SHELF	= NOT APPLICABLE
	BOTTLE SHELF	= IC10342
	BOTTLE BAR	= IC10342A
	BOTTLE FINGERS	= IC10331
	SALAD BOX BASE	= NOT APPLICABLE
	SALAD BOX LID	= NOT APPLICABLE
<u>GAS / ELECTRIC ZONE</u>		
	MAINS SWITCH GREEN	= 2951433107
	12V SWITCH RED	= 2951398201
	THERMOCOUPLE	= GR10018
	240V ELEMENT	= 2952173009
	12V ELEMENT	= EL10293A
	GAS VALVE	= 2926276110
	THERMOSTAT GAS	= NOT APPLICABLE
	THERMOSTAT ELECTRIC	= EL10285
	PIEZO IGNITER	= IG10231
	ELECTRONIC IGNITER	= IG10227
<u>COOLING ZONE</u>		
	JUNKERS BURNER	= 2923430504
	SPARK ELECTRODE	= 2923626002
	JET 46	= JB10074
	IGNITION LEAD	= IG10206
<u>MISC</u>		
	THERMOSTAT KNOB	= CK10519
	GAS KNOB	= 2951289004
		=

OTHER PARTS ARE AVAILABLE , PLEASE CONTACT LEISURE SPARES 01423 321106

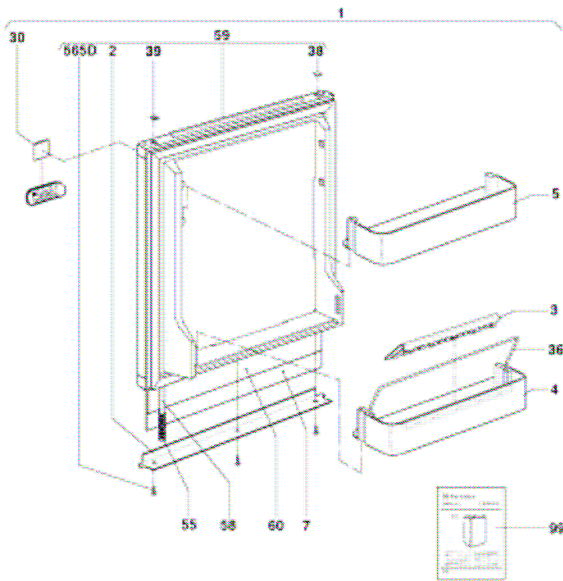


Nur die im Text aufgeführten Ersatzteile sind tatsächlich im Produkt!  
Only the spare parts which are listed, are really in the product!

( 4210 T13 )

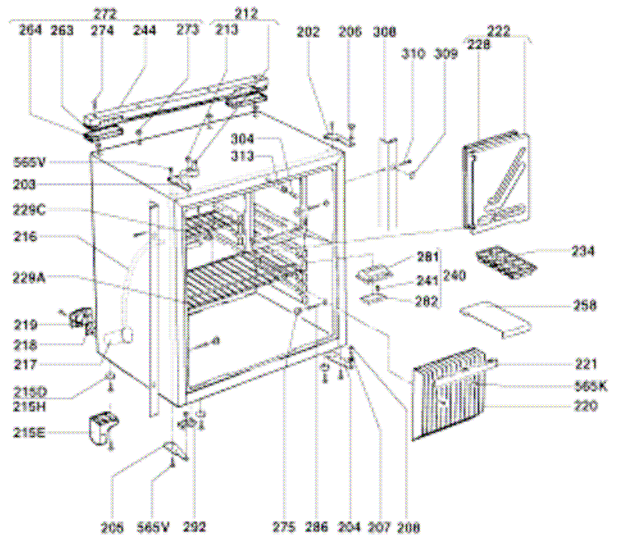


Nur die im Text aufgeführten Ersatzteile sind tatsächlich im Produkt!  
Only the spare parts which are listed, are really in the product!

 ( 4210 G10 )

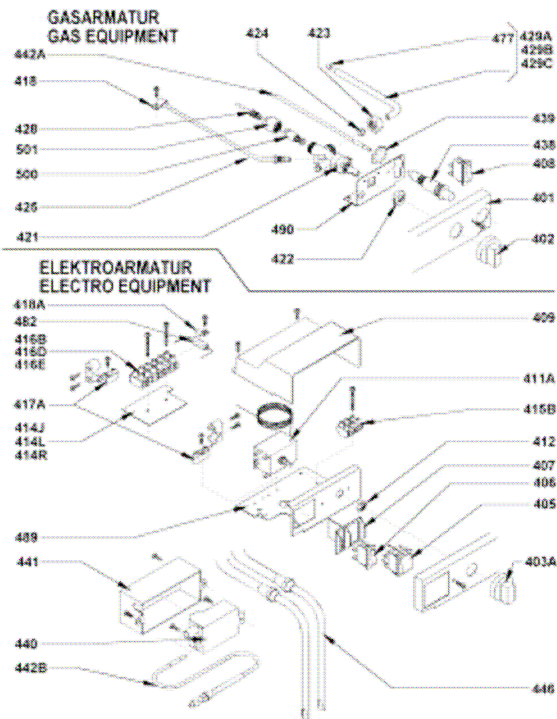

Nur die im Text aufgeführten Ersatzteile sind tatsächlich im Produkt!  
Only the spare parts which are listed, are really in the product!

 ( 4200 AR20 )

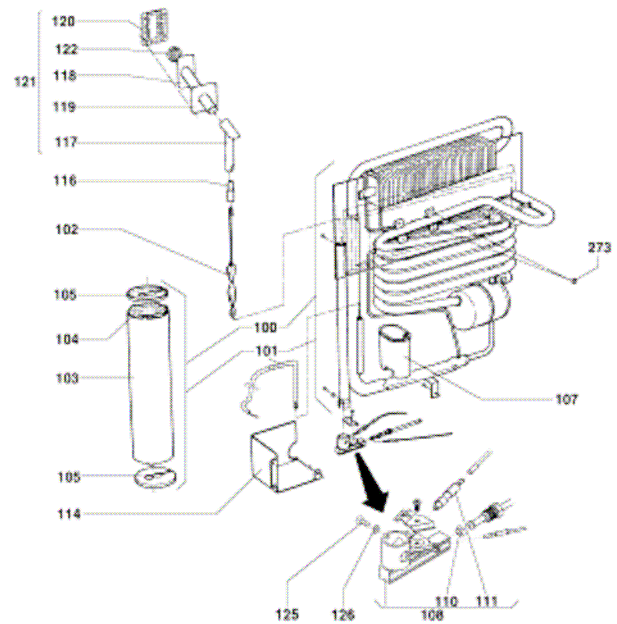

Nur die im Text aufgeführten Ersatzteile sind tatsächlich im Produkt!  
Only the spare parts which are listed, are really in the product!

( 4200 AG01 )

**RM4200 / 4201**