 


MODEL = **RM4213S**


POPULAR SPARE PARTS

			<u>LEISURE SPARES PART NUMBER</u>
<u>CABINET</u>			
	UPPER SHELF	=	IC10353
	LOWER SHELF	=	IC10353A
	FREEZER DOOR	=	IC10350
	FREEZER DOOR HINGES	=	NOT APPLICABLE
<u>DOOR</u>			
	TRAVEL CATCH	=	TR10417
	UPPER SHELF	=	IC10343
	MIDDLE SHELF (FULL WIDTH)	=	NOT APPLICABLE
	HANGING DOOR SHELF	=	NOT APPLICABLE
	BOTTLE SHELF	=	IC10342
	BOTTLE BAR	=	IC10342A
	BOTTLE DIVIDER	=	IC10331
<u>GAS / ELECTRIC ZONE</u>			
	IGNITION SWITC ORANGE	=	IG10234
	MAINS SWITCH GREEN	=	EL10282
	12V SWITCH RED	=	2926273505
	THERMOCOUPLE	=	GR10018
	240V ELEMENT	=	EL10288
	12V ELEMENT	=	EL10259
	GAS VALVE / THERMOSTAT	=	GR10017
	THERMOSTAT GAS	=	GR10016
	THERMOSTAT ELECTRIC	=	EL10285
	PIEZO IGNITER	=	NOT APPLICABLE
	ELECTRONIC IGNITER	=	IG10227
<u>COOLING ZONE</u>			
	JUNKERS BURNER (WITH ELECTRODE & JET)	=	JB10069
	SPARK ELECTRODE	=	IG10233
	JET 43	=	JB10070
	IGNITION LEAD	=	IG10206
<u>MISC</u>			
	THERMOSTAT KNOB	=	CK10519
	GAS VALVE KNOB	=	CK10518

OTHER PARTS ARE AVAILABLE , PLEASE CONTACT LEISURE SPARES 01423 321106

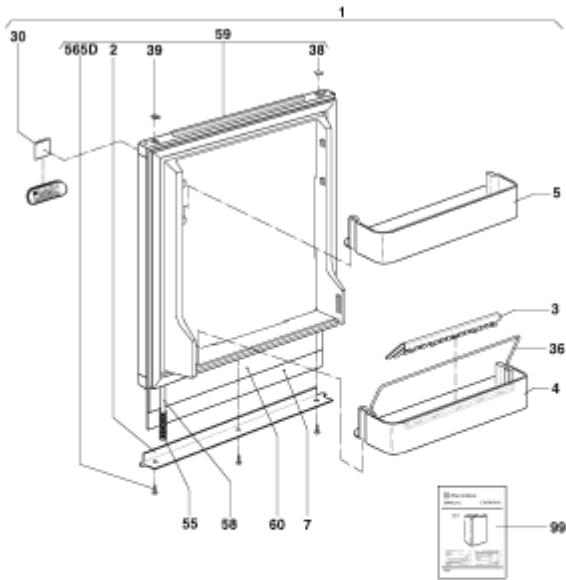

 
Nur die im Text aufgeführten Ersatzteile sind tatsächlich im Produkt!
Only the spare parts which are listed, are really in the product!

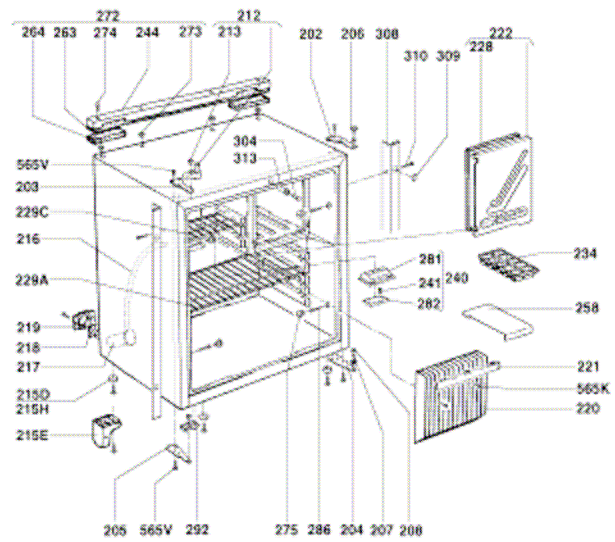

Nur die im Text aufgeführten Ersatzteile sind tatsächlich im Produkt!
Only the spare parts which are listed, are really in the product!


(4210 T13)

 (4210 G10)

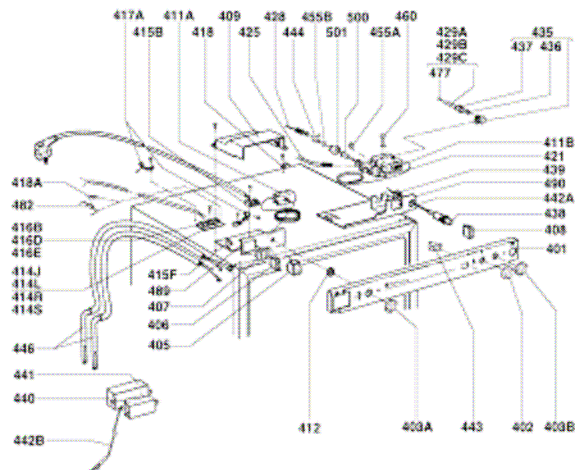

Nur die im Text aufgeführten Ersatzteile sind tatsächlich im Produkt!
Only the spare parts which are listed, are really in the product!

 (4270 AR14)

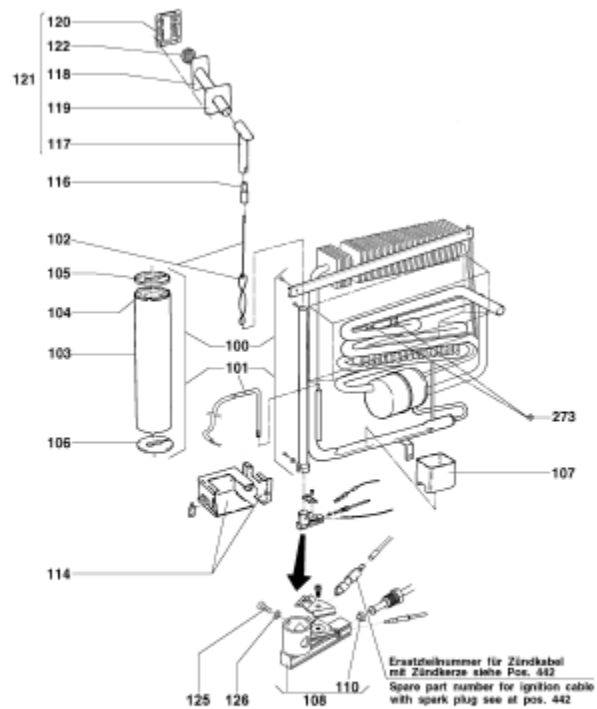

Nur die im Text aufgeführten Ersatzteile sind tatsächlich im Produkt!
Only the spare parts which are listed, are really in the product!

(4211 AG02)

RM4213S