 
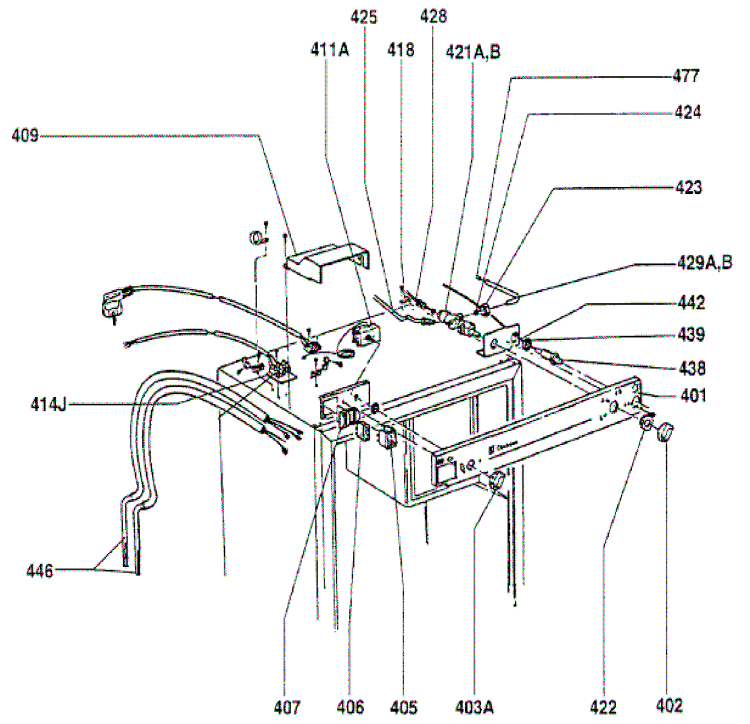 
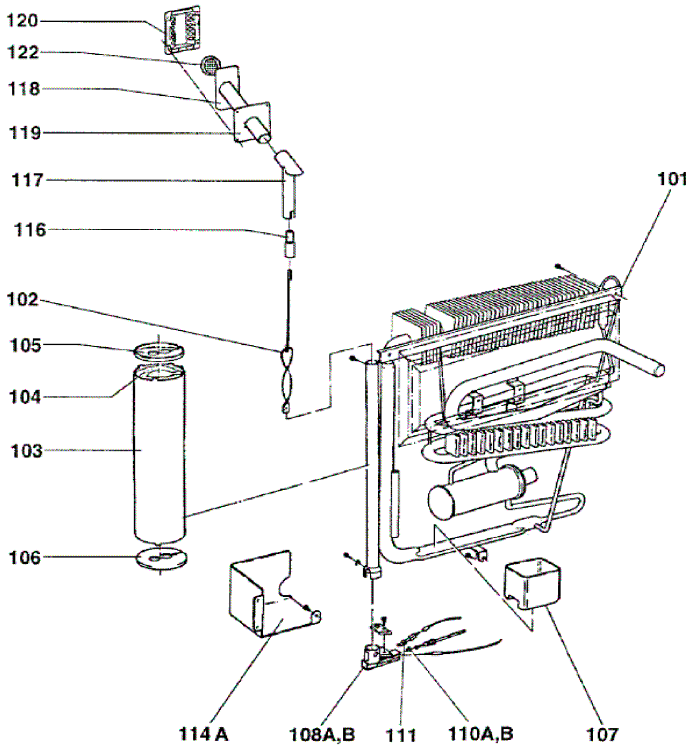 
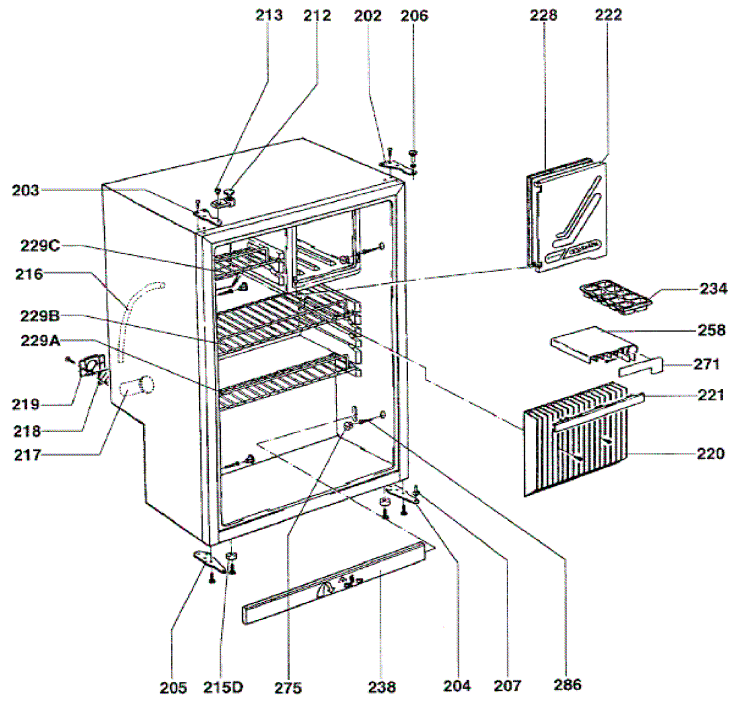 


MODEL = RM4230 / 4231

POPULAR SPARE PARTS

	<u>LEISURE SPARES PART NUMBER</u>
<u>CABINET</u>	
UPPER SHELF	= IC10349B
LOWER SHELF	= 2951521158
FREEZER DOOR	= IC10341C
FREEZER DOOR HINGES	= NOT APPLICABLE
<u>DOOR</u>	
TRAVEL CATCH	= TR10415
UPPER SHELF	= IC10343
MIDDLE SHELF (FULL WIDTH)	= IC10343
HANGING DOOR SHELF	= NOT APPLICABLE
BOTTLE SHELF	= IC10342
BOTTLE BAR	= IC10342A
BOTTLE FINGERS	= IC10331
SALAD BOX BASE	= NOT APPLICABLE
SALAD BOX LID	= NOT APPLICABLE
<u>GAS / ELECTRIC ZONE</u>	
MAINS SWITCH GREEN	= EL10282
12V SWITCH RED	= 2926273505
THERMOCOUPLE	= GR10018
240V ELEMENT	= 2952173009
12V ELEMENT	= EL10293A
GAS VALVE	= 2926276110
THERMOSTAT GAS	= NOT APPLICABLE
THERMOSTAT ELECTRIC	= EL10285
PIEZO IGNITER RM4230	= IG10231
ELECTRONIC IGNITER RM4231	= IG10227
<u>COOLING ZONE</u>	
JUNKERS BURNER	= 2923430504
SPARK ELECTRODE	= IG10233
JET 45 (28 TO 37 MBAR)	= JB10058
JET 46 (50 MBAR)	= JB10074
IGNITION LEAD	= IG10206
<u>MISC</u>	
THERMOSTAT KNOB	= CK10519
GAS KNOB	= 2951289004
	=

OTHER PARTS ARE AVAILABLE , PLEASE CONTACT LEISURE SPARES 01423 321108

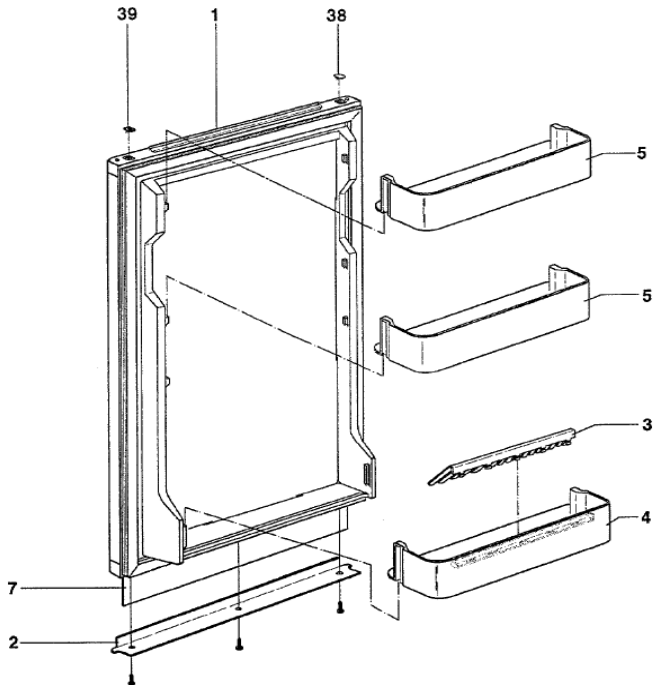

RM4230 4231