

MODEL = RM4270 /4271

POPULAR SPARE PARTS

			<u>LEISURE SPARES PART NUMBER</u>
<u>CABINET</u>			
	UPPER SHELF	=	IC10357B
	LOWER SHELF	=	IC10348
	FREEZER DOOR	=	IC10345
	FREEZER DOOR HINGES	=	HI10384AB
<u>DOOR</u>			
	TRAVEL CATCH	=	TR10415
	UPPER SHELF	=	IC10343
	MIDDLE SHELF (FULL WIDTH)	=	IC10343
	BOTTLE SHELF	=	IC10342
	BOTTLE BAR	=	IC10342A
	BOTTLE FINGERS	=	IC10331
<u>GAS / ELECTRIC ZONE</u>			
	MAINS SWITCH GREEN	=	EL10282
	12V SWITCH RED	=	2926273505
	THERMOCOUPLE	=	GR10018
	240V ELEMENT	=	EL10288
	12V ELEMENT	=	EL10259
	GAS VALVE	=	GR10017
	THERMOSTAT GAS	=	GR10016
	THERMOSTAT ELECTRIC	=	EL10285
	PIEZO IGNITER 4270	=	IG10231
	ELECTRONIC IGNITER 4271	=	IG10227
<u>COOLING ZONE</u>			
	JUNKERS BURNER (WITH ELECTRODE & JET)	=	JB10069
	SPARK ELECTRODE	=	2923626002
	JET 43	=	JB10070
	IGNITION LEAD	=	IG10206
<u>MISC</u>			
	GAS VALVE KNOB	=	CK10518
	THERMOSTAT ELECTRIC KNOB	=	CK10519
	THERMOSTAT GAS KNOB	=	CK10520

OTHER PARTS ARE AVAILABLE , PLEASE CONTACT LEISURE SPARES 01423 321108