

# MODEL = RM4361

## POPULAR SPARE PARTS

<u>CABINET</u>		<u>LEISURE SPARES PART NUMBER</u>
	UPPER SHELF	= IC10357A
	LOWER SHELF	= IC10357B
	FREEZER DOOR	= IC10344
	FREEZER DOOR HINGES	= HI10384AB
<u>DOOR</u>		
	TRAVEL CATCH	= TR10417
	UPPER SHELF	= IC10343
	MIDDLE SHELF (FULL WIDTH)	= IC10343
	HANGING DOOR SHELF	= NOT APPLICABLE
	BOTTLE SHELF	= IC10342
	BOTTLE BAR	= IC10342A
	BOTTLE FINGERS	= IC10331
<u>GAS / ELECTRIC ZONE</u>		
	IGNITER SWITCH ORANGE	= IG10234
	MAINS SWITCH GREEN	= EL10282
	12V SWITCH RED	= 2926273505
	THERMOCOUPLE	= GR10018
	240V ELEMENT	= 2413229002
	12V ELEMENT	= EL10295A
	GAS VALVE	= GR10017
	THERMOSTAT GAS	= GR10016
	THERMOSTAT ELECTRIC	= EL10285
	PIEZO IGNITER	= NOT APPLICABLE
	ELECTRONIC IGNITER	= IG10227
<u>COOLING ZONE</u>		
	JUNKERS BURNER (WITH ELECTRODE & JET)	= JB10069
	SPARK ELECTRODE	= IG10233
	JET 43	= JB10070
	IGNITION LEAD	= IG10206
<u>MISC</u>		
	GAS VALVE KNOB	= 2951289103
	ELECTRIC KNOB	= CK10519
	GAS THERMOSTAT KNOB	= CK10520

OTHER PARTS ARE AVAILABLE , PLEASE CONTACT LEISURE SPARES 01423 321108