

MODEL = RM6270 / 6271

POPULAR SPARE PARTS

<u>CABINET</u>		<u>LEISURE SPARES PART NUMBER</u>
	UPPER SHELF	= IC10360
	LOWER SHELF	= IC10359
	FREEZER DOOR	= IC10365
	FREEZER DOOR HINGES	= HI10387
<u>DOOR</u>		
	TRAVEL CATCH	= TR10422A
	UPPER SHELF	= IC10363A
	MIDDLE SHELF (FULL WIDTH)	= IC10363
	HANGING DOOR SHELF	= IC10363B
	BOTTLE SHELF	= IC10363
	BOTTLE BAR	= IC10364
	BOTTLE DIVIDER	= IC10372
	SALAD BOX BASE	= IC10371A
	SALAD BOX LID	= IC10371B
<u>GAS / ELECTRIC ZONE</u>		
	MAINS SWITCH GREEN	= NOT APPLICABLE
	12V SWITCH RED	= NOT APPLICABLE
	THERMOCOUPLE	= GR10018
	240V ELEMENT	= EL10300
	12V ELEMENT	= EL10259
	GAS VALVE / THERMOSTAT	= GR10025
	THERMOSTAT	= PART OF GR10025
	PIEZO IGNITER RM6270	= IG10226
	ELECTRONIC IGNITER RM6271	= IG10227
<u>COOLING ZONE</u>		
	JUNKERS BURNER (WITH ELECTODE & JET)	= JB10069
	SPARK ELECTRODE	= IG10233
	JET 43	= JB10070
	IGNITION LEAD	= IG10206
<u>MISC</u>		
	THERMOSTAT KNOB	= CK10523
	SELECTOR KNOB	= CK10524
	SELECTOR SWITCH	= EL10303

OTHER PARTS ARE AVAILABLE , PLEASE CONTACT LEISURE SPARES 01423 321106