<u>MODEL =</u> RM6505

POPULAR SPARE PARTS

LEISURE SPARES PART NUMBER

		LEISONE	
<u>CABINET</u>			
	UPPER SHELF	=	IC10368A
	LOWER SHELF	=	IC10368A
	FREEZER DOOR	=	2932404029
	FREEZER UPPER SHELF	=	IC10375
	FREEZER LOWER SHELF	=	IC10368B
DOOR			
DOON	TRAVEL CATCH	=	TR10420
	TRAVEL CATCH BRACKET	=	TR10420A
		=	IC10355
	MIDDLE SHELF (FULL WIDTH)	=	IC10354
	BOTTLE SHELF	=	IC10354
	BOTTLE BAR	=	IC10354A
	BOTTLE FINGERS	=	IC10331
	SALAD CRISPER	=	2932374016
GAS / ELECTRIC ZONE			
	THERMOCOUPLE	=	GR10028
	240V ELEMENT	=	EL10296B
	12V ELEMENT	=	173767013
	GAS VALVE	=	2931656017
	THERMOSTAT GAS	=	2931336016
	ELECTRONIC IGNITER	=	IG10227
		_	1010227
COOLING ZONE			
COOLING ZONE		=	1040070
	JUNKERS BURNER	-	JB10076
	SPARK ELECTRODE	=	2930379009
	JET 39	=	2007419159
	IGNITION LEAD	=	2931360057
MISC			
	THERMOSTAT KNOB	=	
	GAS KNOB	=	

OTHER PARTS ARE AVAILABLE , PLEASE CONTACT LEISURE SPARES 01423 32110{