


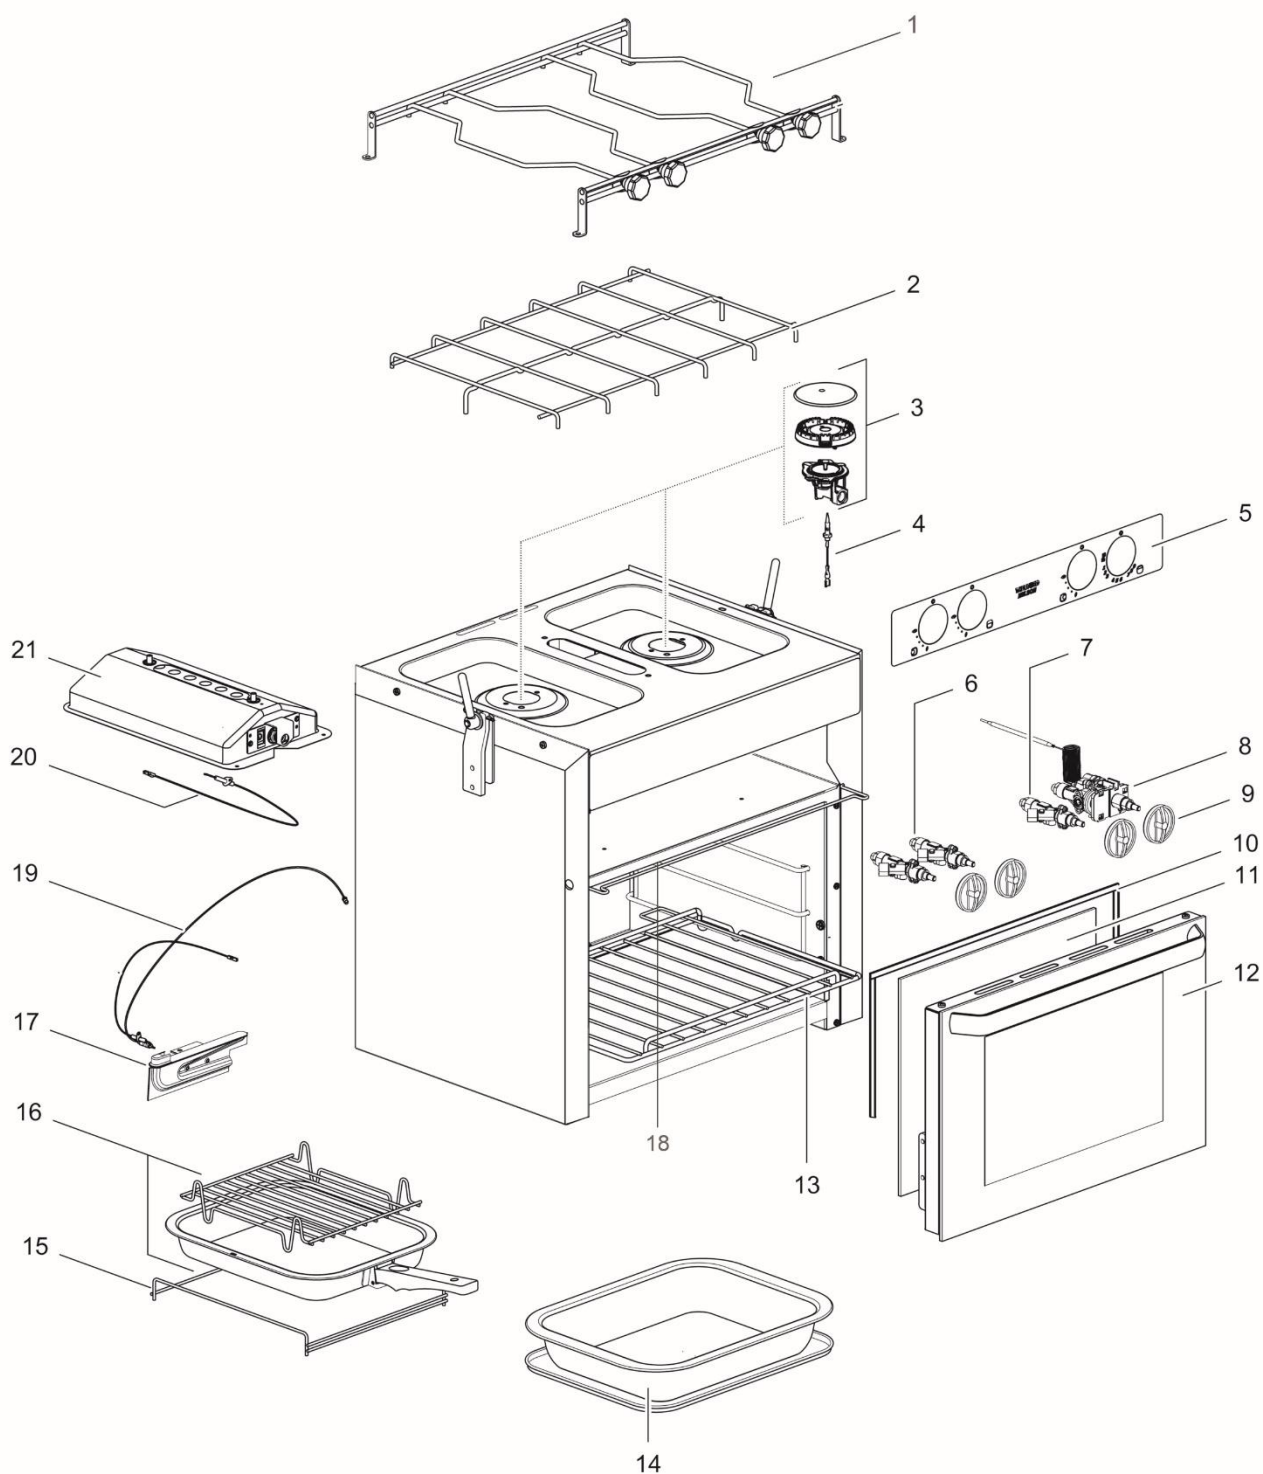

LE1347_SOH15XX

		Spare part number	Spare part number
1	Pan holder adjustable	SSPA0958	
2	Pan support	SSPA0959	
3	Burner assy (medium)		
	Prod date: < 28-02-13 (E059P...)	SSPA0130	
	Prod date: ≥ 01-03-13 (E060P...)	SSPA0812	
4	Thermocouple		
	Production date: < 28-02-13 (E059P...)	SSPA0677	
	Production date: ≥ 01-03-2013 (≥ E060P...)	SSPA0680	
5	Fascia sticker	Not available	
6	Gas tap burner 1x		
	Prod date: < 28-02-13 (E059P...)	SSPA0432	
	Gas tap burner 2x		
	Prod date: ≥ 01-03-13 (E060P...)	SSPA0430	
7	Gas tap grill		
	Prod date: < 28-02-13 (E059P...)	SSPA0472	
	Prod date: ≥ 01-03-13 (E060P...)	SSPA0470	
8	Gas tap oven		
	Prod date: < 28-02-13 (E059P...)	Not available	
	Prod date: ≥ 01-03-13 (E060P...)	SSPA0450	
9	Control knobs	SSPA1206.BK	
10	Door seal	SSPA0065	
11	Glass, inner door	SSPA0258	
12	Oven door	SMAO0041.BKX (for SOH1500 /1505/1507)	SMAO0041-BK01X (for SOH1509)
13	Oven shelf	SSPA0987	
14	Baking tray and roasting dish set	SSPA0999	
15	Grill cradle	SSPA0957	
16	Grill pan		
	Full set, including trivet and handle	SSPA0993	
	Trivet only	SSPA0998	
17	Oven burner	Not available	
18	Door restraint bar	SSPA0097	
19	Thermocouple oven		
	Prod date: < 28-02-13 (E059P ...)	SSPA0153	
	Prod date: ≥ 01-03-13 (E060P...)	SSPA0623	
20	Thermocouple grill		
	Prod date: < 28-02-13 (E059P...)	SSPA0637	
	Prod date: ≥ 01-03-13 (E060P...)	SSPA0635	
21	Grill burner	SSPA0184	

xxxxxx= not available anymore