



LE1347_SOH15XX

		Spare part number	Spare part number
1	Pan holder adjustable	SSPA0958	
2	Pan support	SSPA0959	
3	Burner assy (medium)		
	Prod date: < 28-02-13 (E059P...)	SSPA0130	
	Prod date: ≥ 01-03-13 (E060P...)	SSPA0812	
4	Thermocouple		
	Production date: < 28-02-13 (E059P...)	SSPA0677	
	Production date: ≥ 01-03-2013 (≥ E060P...)	SSPA0680	
5	Fascia sticker	Not available	
6	Gas tap burner 1x		
	Prod date: < 28-02-13 (E059P...)	SSPA0432	
	Gas tap burner 2x		
	Prod date: ≥ 01-03-13 (E060P...)	SSPA0430	
7	Gas tap grill		
	Prod date: < 28-02-13 (E059P...)	SSPA0472	
	Prod date: ≥ 01-03-13 (E060P...)	SSPA0470	
8	Gas tap oven		
	Prod date: < 28-02-13 (E059P...)	Not available	
	Prod date: ≥ 01-03-13 (E060P...)	SSPA0450	
9	Control knobs	SSPA1206.BK	
10	Door seal	SSPA0065	
11	Glass, inner door	SSPA0258	
12	Oven door	SMAO0041.BKX (for SOH1500 /1505/1507)	SMAO0041.BK01X (for SOH1509)
13	Oven shelf	SSPA0987	
14	Baking tray and roasting dish set	SSPA0999	
15	Grill cradle	SSPA0957	
16	Grill pan		
	<i>Full set, including trivet and handle</i>	SSPA0993	
	<i>Trivet only</i>	SSPA0998	
17	Oven burner	Not available	
18	Door restraint bar	SSPA0097	
19	Thermocouple oven		
	Prod date: < 28-02-13 (E059P ...)	SSPA0153	
	Prod date: ≥ 01-03-13 (E060P...)	SSPA0623	
20	Thermocouple grill		
	Prod date: < 28-02-13 (E059P...)	SSPA0637	
	Prod date: ≥ 01-03-13 (E060P...)	SSPA0635	
21	Grill burner	SSPA0184	

*****= no longer available