
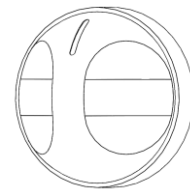
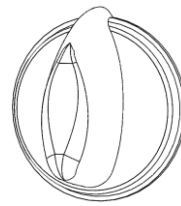


LE1328_SOV70XXX

		Spare part number	Spare part number	Colours available
1	Oven tap			
	Production date: < 08-11-11 (E312M...)	SSPA0452		
	Production date: > 08-11-11 (E312M...)	SSPA0451		
2	Knob	<i>Refer to page 3</i>		
3	Ignition switch (rectangular or round)	<i>Refer to page 3</i>		
4	Oven seal	SSPA0062		
5	Piezo ignition (n.a. on all models)	<i>Refer to page 3</i>		
6	Oven door	<i>Refer to page 4</i>		
7	Glass, inner door	SSPA0253		
8	Oven shelf	SSPA0982		
9	Grill pan	SSPA0993		
10	Oven burner	SSPA0191		
11	Thermocouple oven	SSPA0622	SSPA0623	
		< 08-11-2011	> 08-11-2011	
		(E312M.....)	(E312M.....)	
12	Electrode oven			
13	Spark generator (n.a. on all models)	<i>Refer to page 3</i>		

Knobs

Control Knob

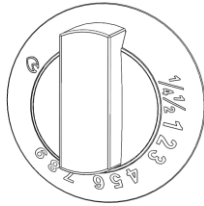

Spare part number

SSPA0912

SSPA0915

SSPA0913

Colours available

Chrome
Satin

Satin

Black

Set quantity

3,0

3,0

3,0

Ignition switches



Description

Ignition switch rectangular


Piezo ignition

Spare part number

SSPA0380

SSPA0382

Spark generator

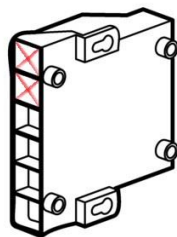

Description


4 terminals, 2 blanks

Spare part number


SSPA0303

Cladding styles


No cladding

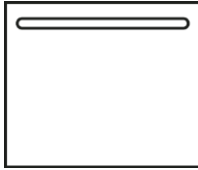



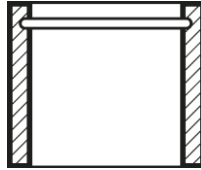





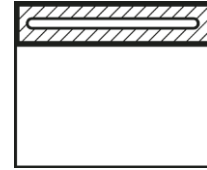Side cladding



Behind handle cladding



Oven doors

Spare part number	Glass	Print	Cladding	Cladding Position	Handle Style	Handle Colour
SMAO3435.BKX	Clear	Black	No	N/A		Black
SMAO3435.BK1X	Clear	Black	No	N/A		Steel
SMAO3435.BK5X	Clear	Black	Brushed stainless	Sides		Steel
SMAO3435.BK11X	Clear	Black	Linen stainless	Sides		Steel
SMAO3435.BK13X	Clear	Black	Brushed stainless	Sides		Black
SMAO3435.MIR1X	Mirror	Black	No	N/A		Steel
SMAO3435.MIR6X	Mirror	Black	No	N/A		Chrome
SMAO3435.SSX	Sparkling stainless	Black	No	N/A		Black