
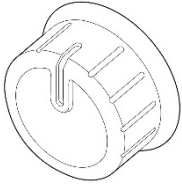


LE1315_SOH44XXX




		Spare part number	Spare part number	Colours available
1	Glass lid (BK : smoked black)	SSPA0235		.BK
2	Glass lid hinges (2x)	SSPA0010		
3	Pan support	SSPA0961		
4	Pan support clips (4x)	SSPA0041		
	Pan support clips (50x)	SSPA0042		
5	Bump stops (2x)	SSPA0040		
6	Burner assy medium			
	<i>Production Date: < 01/05/2022 (E121Z...)</i>	SSPA0114		
	<i>Production Date: ≥ 01/05/2022 (E121Z...)</i>	SSPA0812		
7	Burner assy large			
	<i>Production Date: < 01/05/2022 (E121Z...)</i>	SSPA0123		
	<i>Production Date: ≥ 01/05/2022 (E121Z...)</i>	SSPA0813		
8	Spark electrode (4x)	SSPA0310		
9	Thermocouples			
	Front left			
	<i>Production Date: < 01/05/2022 (E121Z...)</i>	SSPA0676		
	<i>Production Date: ≥ 01/05/2022 (E121Z...)</i>	SSPA0681		
	Front right			
	<i>Production Date: < 01/05/2022 (E121Z...)</i>	SSPA0675		
	<i>Production Date: ≥ 01/05/2022 (E121Z...)</i>	SSPA0680		
	Rear right			
	<i>Production Date: < 01/05/2022 (E121Z...)</i>	SSPA0676		
	<i>Production Date: ≥ 01/05/2022 (E121Z...)</i>	SSPA0682		
10	Gas tap oven			
	<i>Production Date: < 01/05/2022 (E121Z...)</i>	SSPA0452		
	<i>Production Date: ≥ 01/05/2022 (E121Z...)</i>	SSPA0449		
11	Gas tap grill			
	<i>Production Date: < 01/05/2022 (E121Z...)</i>	SSPA0472		
	<i>Production Date: ≥ 01/05/2022 (E121Z...)</i>	SSPA0474		
12	Spark ignition button (incl. switch)	SSPA0381		
13	Light switch <i>*not all models</i>	SSPA0591		
14	Gas tap burner (1x)			
	<i>Production Date: < 01/05/2022 (E121Z...)</i>	SSPA0432		
	<i>Production Date: ≥ 01/05/2022 (E121Z...)</i>	SSPA0433 <i>medium</i>	SSPA0474 <i>large</i>	
15	Control knobs	<i>Refer to page 3</i>		
16	Grill door	<i>Refer to page 3</i>		
17	Oven door	<i>Refer to page 4</i>		
18	Lower door <i>*only for 3/4 height</i>	<i>Refer to page 4</i>		
19	Glass, inner door	SSPA0253		
20	Oven door seal	SSPA0062		
21	Oven shelf	SSPA0980		
22	Grill pan	SSPA0991		

23	Oven lamp <i>*not all models</i>	SSPA0560	
24	Oven burner		
	<i>Production date: < 31-07-21 (E212Y...)</i>	SSPA0191	
	<i>Production date: ≥ 01-08-21 (E213Y...)</i>	SSPA0198	
25	Thermocouple oven		
	<i>Production Date: < 01/05/2022 (E121Z...)</i>	SSPA0642	
	<i>Production Date: ≥ 01/05/2022 (E121Z...)</i>	SSPA0623	
26	Electrode oven		
	<i>Production Date: < 01/05/2022 (E121Z...)</i>	SSPA0321	
	<i>Production Date: ≥ 01/05/2022 (E121Z...)</i>	SSPA0623	
27	Grill burner		
	<i>Production date: < 13-04-2015 (<E103S....)</i>	Not available	
	<i>Production date: ≥ 14-04-2015 (≥ E104S....)</i>	SSPA0185	
28	Thermocouple grill		
	<i>Production Date: < 01/05/2022 (E121Z...)</i>	SSPA0644	
	<i>Production Date: ≥ 01/05/2022 (E121Z...)</i>	SSPA0646	SSPA0636
		<i>Including Electrode</i>	<i>Thermocouple only</i>
29	Electrode grill		
	<i>Production Date: < 01/05/2022 (E121Z...)</i>	SSPA0321	
	<i>Production Date: ≥ 01/05/2022 (E121Z...)</i>	SSPA0646	
		<i>Including Thermocouple</i>	
30	Spark generator	SSPA0399	

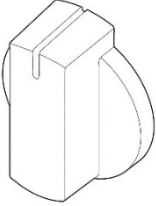

Control knobs

Control Knob sets		
Spare part number	SSPA0900	SSPA0901
Colours available	Brushed- Nickel/Black (.BNK/BK)	Matt Nickel (.MNK) Satin Chrome (.SCR)
Set quantity	6	6

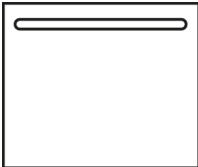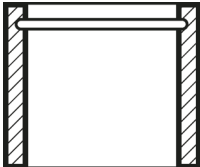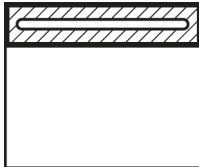Cladding styles


No cladding	Side cladding	Behind handle cladding
		

Grill Doors


Spare part number	Glass	Print	Cladding	Cladding Position	Handle Style	Handle Colour
SMAO3415.BK18X	Clear	Black	No	N/A		Brushed Nickel
SMAO3415.BK15X	Clear	Black	No	N/A		Bright Nickel

Oven door styles


Drop down oven doors

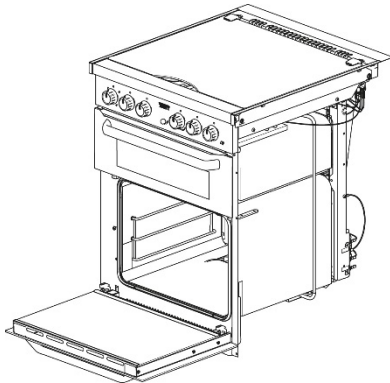

Left hinged oven doors

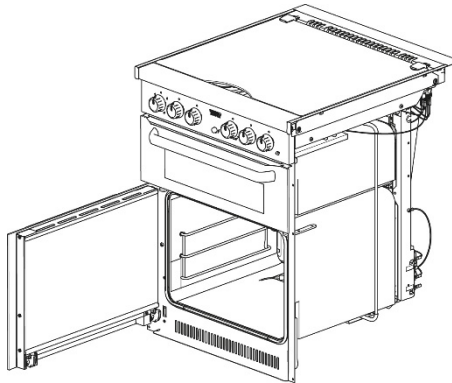

Right hinged oven doors

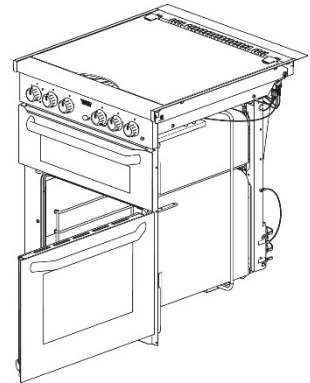

Drop down oven doors

Spare part number	Glass	Print	Cladding	Cladding Position	Handle Style	Handle Colour
SMAO3435.BK20X	Clear	Black	No	N/A		Brushed Nickel
SMAO3435.BK15X	Clear	Black	No	N/A		Brushed Nickel

Lower doors

Spare part number	Glass	Print	Cladding	Cladding Position	Handle Style	Handle Colour
SMAO3450.BK	Clear	Black	No	N/A	N/A	N/A