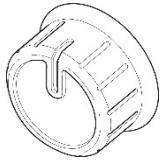
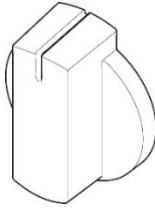
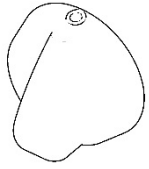


LE1310\_SOG70XXX\_ELECTRIC\_SPARK




		Spare part number	Spare part number
1	Oven/grill tap		
	Production date: < 16-02-07 (E047G...)	SSPA0455	
	Production date: < 12-01-14 (E012R...)	SSPA0456	
	Production date: > 13-01-14 (E013R...)	SSPA0457	
2	Knob	<i>Refer to page 4</i>	
3	Ignition switch (rectangular or round)	<i>Refer to page 4</i>	
4	Light switch*	SSPA0591	
5	Oven seal	SSPA0062	
6	Piezo ignition (n.a. on all models)	<i>Refer to page 4</i>	
7	Oven door	<i>Refer to page 5</i>	
8	Glass, inner door	SSPA0253	
9	Oven shelf	SSPA0982	
10	Grill pan	SSPA0993	
11	Oven burner	SSPA0191	
12	Electrode oven	SSPA0626 > 06-12-16 (E340T.....)	SSPA0606 < 06-12-16 (E340T...)  Modification kit
13	Thermocouple oven		
14	Thermocouple grill	SSPA0627 > 06-12-16 (E340T.....)	
15	Electrode grill		
16	Grill shutoff	SSPA0605	
17	Grill burner		
	Production date: < 26-10-15 (E299S...)	Not available	
	Production date: > 26-10-15 (E299S...)	SSPA0185	
18	Spark generator	<i>Refer to page 5</i>	
19	Oven lamp*	SSPA0560	

\* Only applicable for models with light inside


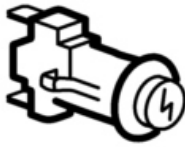

**Knobs**

<b>Control Knob</b>			
<b>Spare part number</b>	SSPA0916	SSPA0911	SSPA0914
<b>Colours available</b>	Brushed-Nickel/Black (.BNK)	Black (.BK) Matt Nickel (.MNK)	Black (.BK) Matt Nickel (.MNK)
<b>Set quantity</b>	3,0	3,0	3,0




**Knobs**
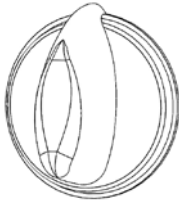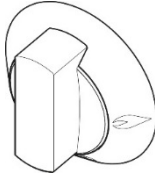
<b>Control Knob</b>			
<b>Spare part number</b>	SSPA0915	SSPA0912	SSPA0913
<b>Colours available</b>	Satin (.SA)	Chrome (.CR)	Black (.BK)
<b>Set quantity</b>	3,0	3,0	3,0

**Ignition switches**

			
<b>Description</b>	Ignition switch rectangular	Ignition switch round	Piezo ignition
<b>Spare part number</b>	SSPA0380	SSPA0381	SSPA0382


## Spark generator

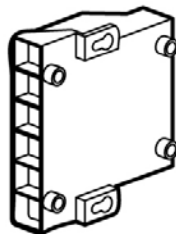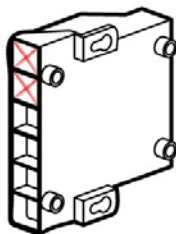


<b>Description</b>	4 terminals, 2 blanks	6 terminals	6 terminals
<b>Spare part number</b>	SSPA0303	SSPA0399	SSPA0301

## Cladding styles

No cladding

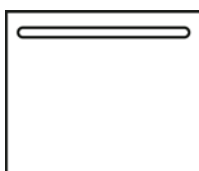

Side cladding

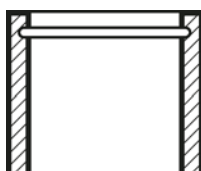

Behind handle cladding



## Oven doors

Spare part number	Glass	Print	Cladding	Cladding Position	Handle Style	Handle Colour
SMAO3435.BKX	Clear	Black	No	N/A		Black
SMAO3435.BK1X	Clear	Black	No	N/A		Steel
SMAO3435.BK5X	Clear	Black	Brushed stainless	Sides		Steel
SMAO3435.BK11X	Clear	Black	Linen stainless	Sides		Steel
SMAO3435.BK13X	Clear	Black	Brushed stainless	Sides		Black
SMAO3435.MIR1X	Mirror	Black	No	N/A		Steel
SMAO3435.MIR6X	Mirror	Black	No	N/A		Chrome
SMAO3435.SSX	Sparkling stainless	Black	No	N/A		Black