

LE1311\_SOP139XX




		Spare part number	Spare part number	Colours available
1	Grill door bump	SSPA0040		
2	Light switch	SSPA0590		
3	Ignition switch	SSPA0380		
4	Oven tap			
	Production Date: < 20/03/11 (E079M...)	SSPA0452		
	Production Date: ≥ 21/03/11 (E080M...)	SSPA0451		
5	Grill tap			
	Production Date: < 20/03/11 (E079M...)	SSPA0472		
	Production Date: ≥ 21/03/11 (E080M...)	SSPA0470		
	Production Date: ≥ 01/10/2022 (E274Z..)	SSPA0474		
6	Knob	<i>Refer to page 3</i>		
7	Cut out thermal (1x NO and 1x NC)	SSPA0510		
8	Grill door	<i>Refer to page 4</i>		
9	Oven door	<i>Refer to page 5</i>		
10	Glass, inner door	SSPA0253		
11	Oven seal	SSPA0062		
12	Oven shelf	SSPA0980		
13	Grill pan	SSPA0991		
14	Shut off			
	Production Date: < 28/11/11 (E087M...)	Not available		
	Production Date: ≥ 29/11/11 (E333M...)	SSPA0605		
15	Oven lamp*	SSPA0560		
16	Oven burner			
	Production date: < 31-07-21 (E212Y...)	SSPA0191		
	Production date: ≥ 01-08-21 (E213Y...)	SSPA0198		
17	Thermocouple oven			
	Production Date: < 20/03/11 (E079M...)	SSPA0642		
	Production Date: ≥ 21/03/11 (E080M...)		SSPA0623	
18	Electrode oven	SSPA0321		
19	Spark generator	<i>See Page 3</i>		
20	Fan			
	Production Date: < 29/02/16 (E060T...)	SSPA0520		
	Production Date: ≥ 01/03/16 (E061T...)	SSPA0522		
21	Grill burner			
	Production Date: ≤ 26/04/15 (E116S...)	Not available		
	Production Date: ≥ 27/04/15 (E117S...)	<del>SSPA0185</del>		
22	Thermocouple and electrode grill			
	Production Date: < 23/03/11 (E082M...)	SSPA0624		
	Production Date: ≥ 24/03/11 (E083M...)	SSPA0630		
	Production Date: ≥ 28/11/11 (E332M...)	SSPA0625		
	Production Date: ≥ 24/03/13 (E083P...)	SSPA0631		

\* Only applicable for models with light inside

XXXXXX is not available anymore

**Control knobs**


**Control Knob**

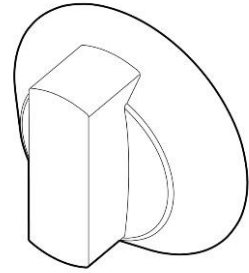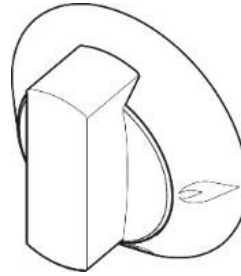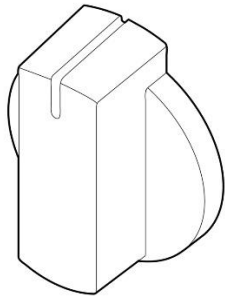

<b>Spare part number</b>	SSPA0911	SSPA0934	SSPA0937
<b>Colours available</b>	Matt Nickel (.MNK)	Chrome (.CR) Satin (.SA)	Chrome (.CR)
<b>Set quantity</b>	3	2	2



**Control knobs**

**Control Knob**

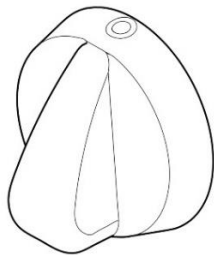

<b>Spare part number</b>	SSPA0939
<b>Colours available</b>	Black (.BK)
<b>Set quantity</b>	4


**Spark generators**

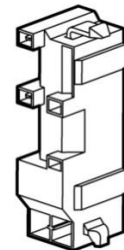


<b>Description</b>	2 terminals, 4 blanks	6 terminals
<b>Spare part number</b>	SSPA0302	SSPA0301

## Cladding styles


No cladding

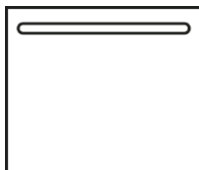



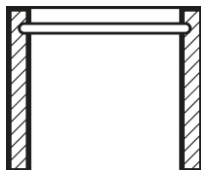

Side cladding

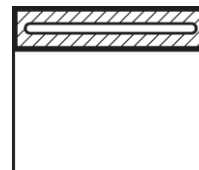

Behind handle cladding




## Grill doors


Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Handle colour
SMAO4120.BKX	Clear	Black	Yes	Sides		BNK
SMAO4120.BK5X	Clear	Black	No	N/A		BNK
SMAO4120.BK6X	Clear	Black	No	N/A		Black
SMAO4120.BK7X	Clear	Black	No	N/A		Chrome

Oven door styles

Left hinged oven doors

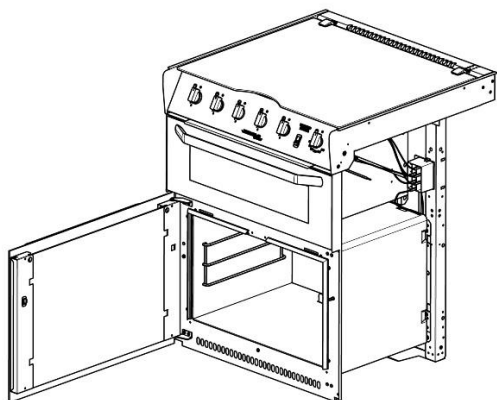

Right hinged oven doors

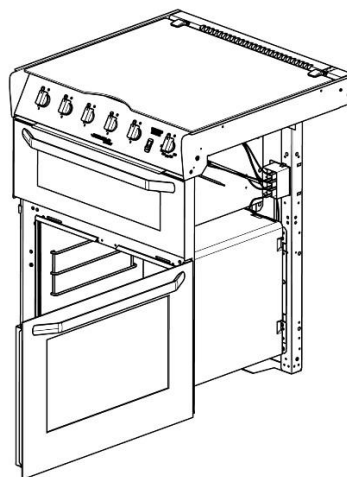

Drop Down oven doors

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Handle colour
SMAO4130.BKX	Clear	Black	Yes	Sides		BNK
SMAO4130.BK5X	Clear	Black	No	N/A		BNK
SMAO4130.BK6X	Clear	Black	No	N/A		Black
SMAO4130.BK7X	Clear	Black	No	N/A		Chrome

Left hinged oven doors

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Handle colour
SMAO4135.BK6LX	Clear	Black	No	N/A		Black
SMAO4135.BK7LX	Clear	Black	No	N/A		Chrome

Right hinged oven doors

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Handle colour
SMAO4135.BK6RX	Clear	Black	No	N/A		Black
SMAO4135.BK7RX	Clear	Black	No	N/A		Chrome