

LE1391_SOH17XXX

		Spare part number	Spare part number	Colours available
1	Glass lid (.BK: smoked black clear)	SSPA0235		
	Glass lid (.SBK: solid black)	SSPA0242		
2	Glass lid hinges 2x	SSPA0010		
3	Shut off assy (=incl. nr 8)			
	Production date: < 06-12-2016 (< E340T...)	SSPA0600		
	Production date: > 07-12-2016 (> E341T...)	SSPA0603		
4	Pan support	SSPA0972		
5	Pan support clips 4x	SSPA0041		
	Pan support clips 50x	SSPA0042		
6	Hotplate (800W)	SSPA0551		
7	Burner assy (medium)			
	Production date: < A (Refer to page 4)	SSPA0117		
	Production date: ≥ B (Refer to page 4)	SSPA0110		
8	Thermocouples hob		For lid shut	
	Front right	SSPA0675	SSPA0671	
	Rear Right	SSPA0676	SSPA0670	
	Production date: ≥ 06-12-2016 (≥ E340T...)		For lid shut	
	Front right	SSPA0680	SSPA0685	
	Rear Right	SSPA0682	SSPA0684	
9	Spark electrode 4x			
	Production date: < A (Refer to page 4)	SSPA0310		
	Production date: ≥ B (Refer to page 4)	SSPA0320		
10	Bump stop 2x	SSPA0040		
11	Gas Tap Oven/grill			
	Production date: < A (Refer to page 4)	SSPA0456		
	Production date: ≥ B (Refer to page 4)	SSPA0457		
	Production date: ≥ 15-10-2017 (≥ E288U...)	SSPA0458		
	Production date: ≥ 29-01-2024 (≥ E288U...)	SSPA0460		
12	Gas tap burner 1x			
	Production date: < A (Refer to page 4)	SSPA0432		
	Production date: ≥ B (Refer to page 4)	SSPA0430		
	Production date: ≥ 15-10-2017 (≥ E288U...)	SSPA0433		
13	Hotplate switch	SSPA0580		
14	Control knobs	Refer to page 4		
15	Spark ignition switch	SSPA0381		
16	Light switch *not all models	SSPA0590		
17	Oven door seal	SSPA0062		
18	Oven door (without handle/hinges)	Refer to page 5		
19	Glass, inner door	SSPA0253		
20	Oven shelf 1x	SSPA0982		
		SSPA0980		
21	Grill pan	SSPA0993		
	Grill pan + trivet (no handle)	SSPA0992		
22	Spark generator			
	Production date: < A (See Table page 4)	SSPA0303		
	Production date: ≥ B (See Table page 4)	SSPA0300		



		Spare part number	Spare part number	Colours available
23	Electrode oven	SSPA0626 ≥ 06-12-16 (E340T...)	SSPA0606 < 06-12-16 (E340T...)	
24	Thermocouple oven			
25	Thermocouple grill	SSPA0627 ≥ 06-12-16 (E340T...) SSPA0695 ≥ 12-06-24 (E072A...)	Modification kit	
26	Electrode grill			
27	Grill shut off	SSPA0605		
28	Grill burner			
	Production date: < 26-04-16 (E299S...)	Not available		
	Production date: ≥ 27-04-16 (E299S...)	SSPA0185		
	Production date: ≥ 29-04-24	SSPO1104 SSPA0188		
29	Oven Burner	SSPA0191		

~~xxxxx~~ = not available anymore

Production date table

Cooker	Production date A	Production date B
SOG71920	< 27/05/2015 (E147S...)	≥ 28/05/2015 (E148S...)
SOG71921	< 27/05/2015 (E147S...)	≥ 28/05/2015 (E148S...)
SOG71915	< 30/11/2014 (E334R...)	≥ 01/12/2014 (E335R...)
Other	< 27/05/2015 (E147S...)	≥ 28/05/2015 (E148S...)


Control knobs

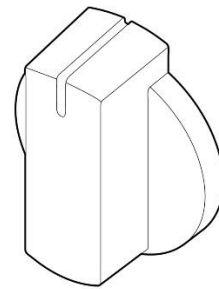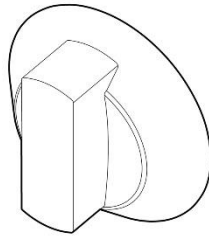

Spare part number	SSPA0936	SSPA0901
Colours available	Chrome(.CR) Satin (.SA)	Matt Nickel (.MNK)
Set quantity	5	6

Oven door styles



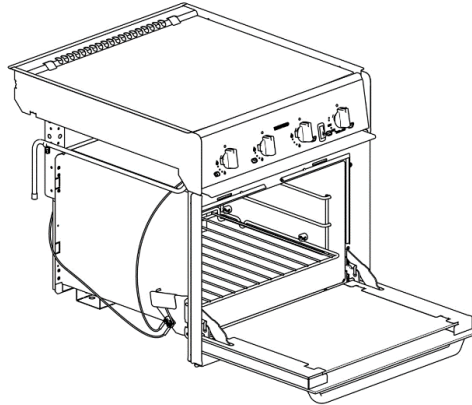



Drop down oven door



Drop down oven doors (without handle and hinges)

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Hinges
SMAO3435.BK99X	Clear	Black	No	N/A	N/A	SSPA1791
SMAO3435.BK97X	Clear	Black	Yes	Bottom	N/A	SSPA1791
SMAO3435.BK95X	Clear	Black	Yes	Sides	N/A	SSPA1791
SMAO3435.BK93X	Clear	Black	Yes	Sides/Top	N/A	SSPA1791
SMAO3435.MIR99X	Mirror	N/A	No	N/A	N/A	SSPA1791

Handles oven doors

Spare part number	Centres (mm) handle fixings	Handle Style	Handle Colour
SSPA1051 HANDLE. ALPS 30-. CHROME OX	390 CRS		Chrome
SSPA1053 HANDLE.T-BAR 12mm	390 CRS		Stainless
SSPA1056 HANDLE ALPS 60-CHROME OX	390 CRS		Chrome
SSPA1057 HANDLE ALPS 30- BRUSHED INOX	390 CRS		Brushed Nickel
SSPA1060 HANDLE. V CUT. BRIGHT NICKEL	390 CRS		Bright Nickel
SSPA1068 HANDLE. ALPS 60-. BRUSHED INOX	390 CRS		Brushed Nickel