


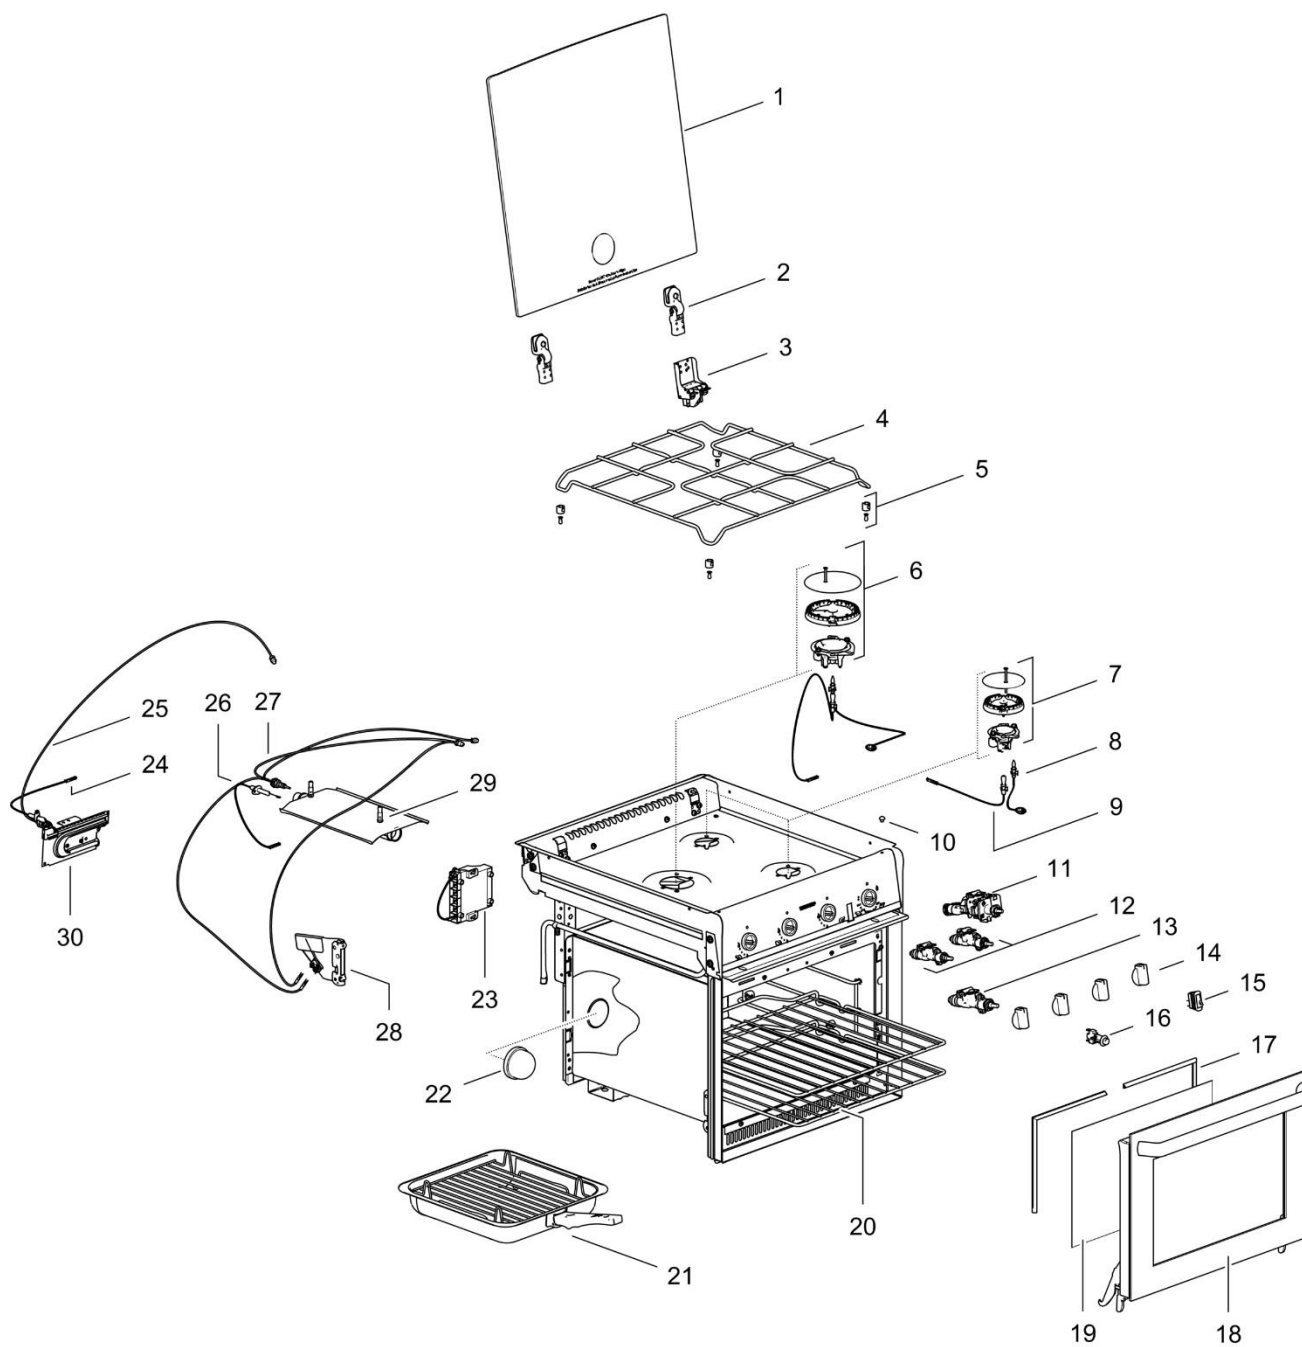


LE1318_SOH709XX

		Spare part number	Spare part number	Colours available
1	Glass lid (.BK: smoked black clear)	SSPA0235		
	Glass lid (.SBK: solid black)	SSPA0242		
2	Glass lid hinges 2x	SSPA0010		
3	Shut off assy (=incl. nr 8)			
	Production date: < 06-12-2016 (< E340T...)	SSPA0600		
	Production date: ≥ 07-12-2016 (≥ E341T...)	SSPA0603		
4	Pan support	SSPA0961		
5	Pan support clips 4x	SSPA0041		
	Pan support clips 50x	SSPA0042		
6	Burner assy (Large)			
	Production date: < 24-06-2012 (< E175N...)	SSPA0123		
	Production date: ≥ 25-06-2012 (≥ E176N...)	SSPA0813		
7	Burner assy (Medium)			
	Production date: < 24-06-2012 (< E175N...)	SSPA0112		
	Production date: ≥ 25-06-2012 (≥ E176N...)	SSPA0110		
8	Thermocouples hob		For lid shut	
	Front left	SSPA0675	SSPA0671	
	Front right	SSPA0675	SSPA0671	
	Rear Left	n.a.	n.a.	
	Rear Right	SSPA0676	SSPA0670	
	Production date: ≥ 25-06-2012 (≥ E175N...)		For lid shut	
	Front left	SSPA0680	SSPA0685	
	Front right	SSPA0681	SSPA0685	
	Rear Left	n.a.	n.a.	
	Rear Right	SSPA0682	SSPA0684	
9	Spark electrode 4x			
	Production date: < 24-06-2012 (< E175N...)	SSPA0310		
	Production date: ≥ 25-06-2012 (≥ E176N...)	SSPA0320		
10	Bump stop 2x	SSPA0040		
11	Gas Tap Oven/grill			
	Production date: < 24-06-2012 (< E175N...)	SSPA0456		
	Production date: ≥ 25-06-2012 (≥ E176N...)	SSPA0457		
	Production date: ≥ 15-10-2017 (≥ E288U...)	SSPA0458		
	Production date: ≥ 29-01-2024 (≥ E288U...)	SSPA0460		
12	Gas tap burner 1x (Medium)			
	Production date: < 24-06-2012 (< E175N...)	SSPA0432		
	Production date: ≥ 25-06-2012 (≥ E176N...)	SSPA0430		
	Production date: ≥ 15-10-2017 (≥ E288U...)	SSPA0433		
13	Gas tap burner 1x (Large)			
	Production date: < 24-06-2012 (< E175N...)	SSPA0472		
	Production date: ≥ 25-06-2012 (≥ E176N...)	SSPA0470		
	Production date: ≥ 15-10-2017 (≥ E288U...)	SSPA0474		
14	Control knobs	Refer to page 4		
15	Spark ignition switch	SSPA0381		
16	Light switch <i>*not all models</i>	SSPA0560		
17	Oven door seal	SSPA0062		
18	Oven door (without handle/hinges)	Refer to page 5		

		Spare part number	Spare part number	Colours available
19	Glass, inner door	SSPA0253		
20	Oven shelf 1x	SSPA0982 SSPA0980		
21	Grill pan	SSPA0993		
22	Oven lamp <i>*not all models</i>	SSPA0562		
23	Spark generator	SSPA0399		
24	Electrode oven	SSPA0626 ≥ 06-12-16 (E340T...)	SSPA0606 < 06-12-16 (E340T...) Modification kit	
25	Thermocouple oven			
26	Thermocouple grill	SSPA0627 ≥ 06-12-16 (E340T...)		
27	Electrode grill	SSPA0695 ≥ 12-06-24 (E052A...)		
28	Grill shutoff	SSPA0605		
29	Grill burner			
	Production date: < 26-04-16 (E299S...)	Not available		
	Production date: ≥ 27-04-16 (E299S...)	SSPA0185		
	Production date: ≥ 29-01-24	SSPO1104 SSPA0188		
30	Oven Burner	SSPA0191		

~~XXXXX~~ = not available anymore

Control knobs

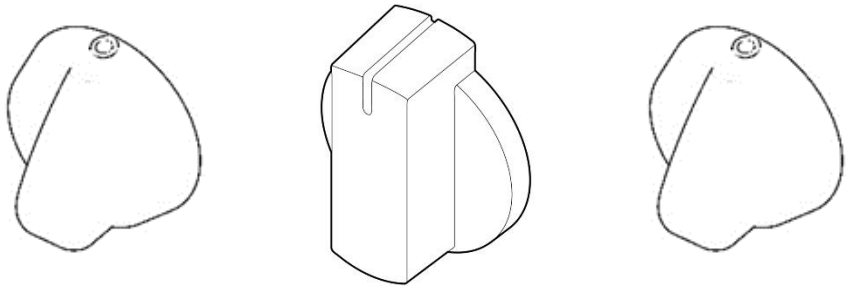

Spare part number	SSPA0939	SSPA0901	SSPA0904
Colours available	Black (.BK) With Marks	Matt Nickel (.MNK) Chrome (.CR) Gloss Nickel (.GNK)	Black (.BK)
Set quantity	4	6	6


Control knobs



Spare part number	SSPA0905	SSPA0936
Colours available	Black (.BK)	Chrome(.CR) Satin (.SA)
Set quantity	6	5

Oven door styles

Drop down oven door

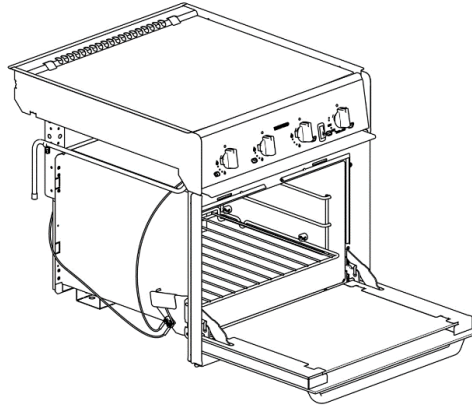

Drop down oven doors (without handle and hinges)

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Hinges
SMAO3435.BK99X	Clear	Black	No	N/A	N/A	SSPA1791
SMAO3435.BK95X	Clear	Black	Yes	Sides	N/A	SSPA1791
SMAO3435.BK93X	Clear	Black	Yes	Sides/Top	N/A	SSPA1791
SMAO3435.BK97X	Clear	Black	Yes	Bottom	N/A	SSPA1791
SMAO3435.MIR99X	Mirror	N/A	No	N/A	N/A	SSPA1791

Handles oven doors

Spare part number	Centres (mm) handle fixings	Handle Style	Handle Colour
SSPA1051 HANDLE. ALPS 30-. CHROME	390 CRS		Chrome
SSPA1053 HANDLE.T-BAR 12mm	390 CRS		Stainless
SSPA1056 HANDLE ALPS 60-CHROME	390 CRS		Chrome
SSPA1057 HANDLE ALPS 30- BRUSHED INOX	390 CRS		Brushed Nickel
SSPA1060 HANDLE. V CUT. BRIGHT NICKEL	390 CRS		Bright Nickel
SSPA1068 HANDLE. ALPS 60-. BRUSHED INOX	390 CRS		Brushed Nickel