


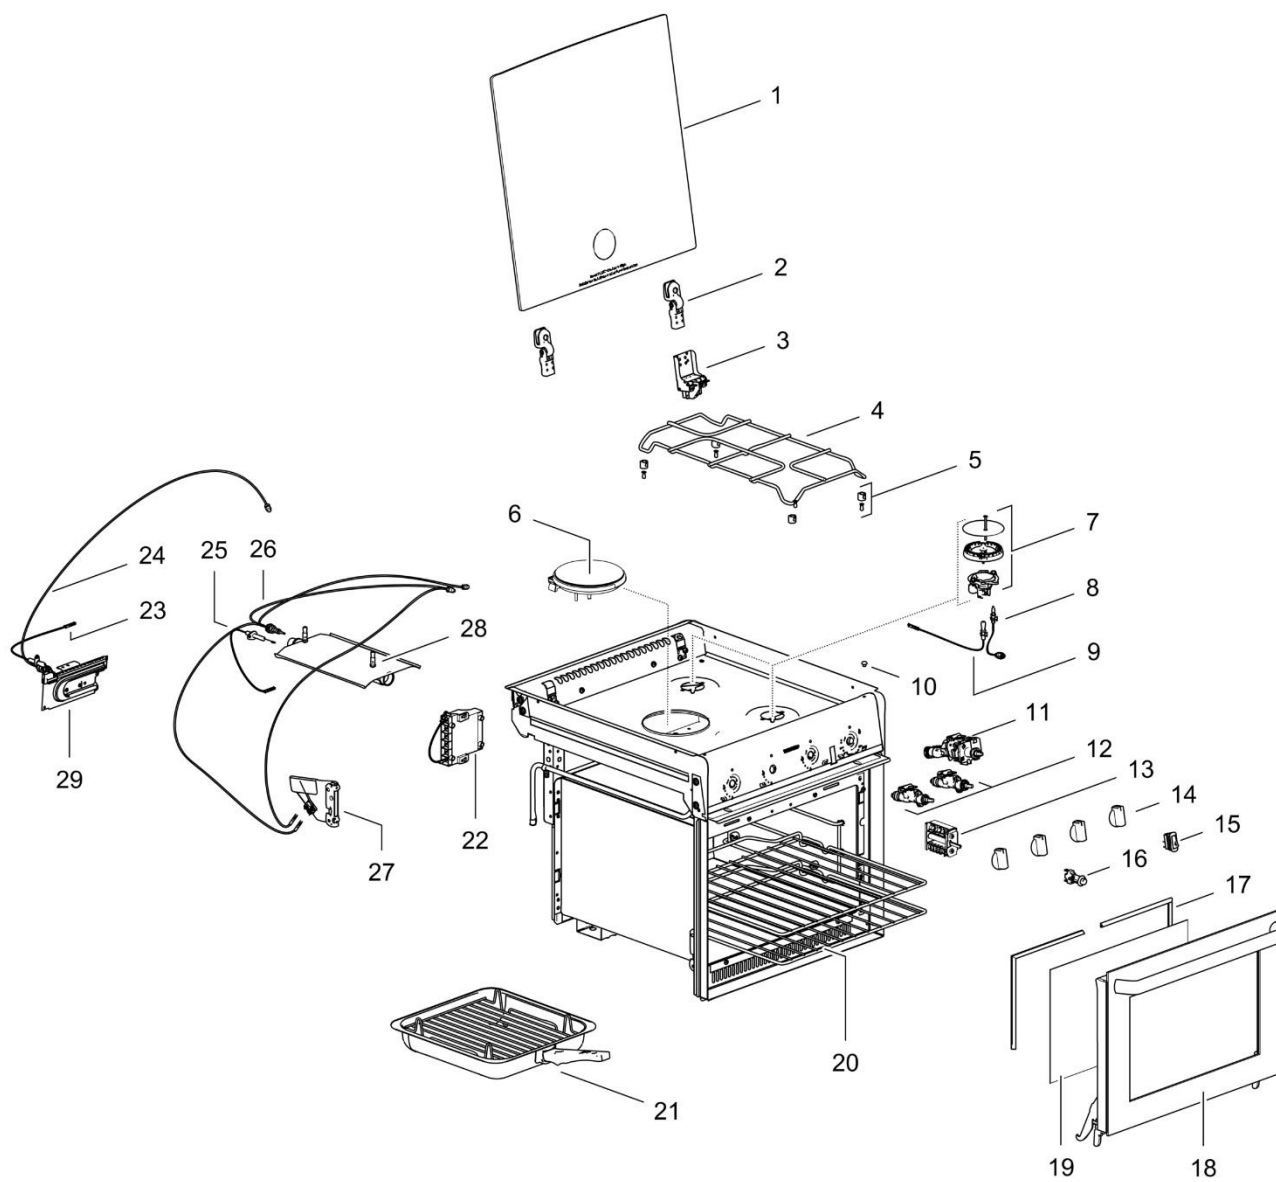

LE1391_SOH17XXX

		Spare part number	Spare part number	Colours available
1	Glass lid (.BK: smoked black clear)	SSPA0235		
	Glass lid (.SBK: solid black)	SSPA0242		
2	Glass lid hinges 2x	SSPA0010		
3	Shut off assy (=incl. nr 8)			
	Production date: < 06-12-2016 (< E340T...)	SSPA0600		
	Production date: > 07-12-2016 (> E341T...)	SSPA0603		
4	Pan support	SSPA0972		
5	Pan support clips 4x	SSPA0041		
	Pan support clips 50x	SSPA0042		
6	Hotplate (800W)	SSPA0551		
7	Burner assy (medium)			
	Production date: < A (Refer to page 4)	SSPA0117		
	Production date: ≥ B (Refer to page 4)	SSPA0110		
8	Thermocouples hob		For lid shut	
	Front right	SSPA0675	SSPA0671	
	Rear Right	SSPA0676	SSPA0670	
	Production date: ≥ 06-12-2016 (≥ E340T...)		For lid shut	
	Front right	SSPA0680	SSPA0684	
	Rear Right	SSPA0682	SSPA0685	
9	Spark electrode 4x			
	Production date: < A (Refer to page 4)	SSPA0310		
	Production date: ≥ B (Refer to page 4)	SSPA0320		
10	Bump stop 2x	SSPA0040		
11	Gas Tap Oven/grill			
	Production date: < A (Refer to page 4)	SSPA0456		
	Production date: ≥ B (Refer to page 4)	SSPA0457		
	Production date: ≥ 15-10-2017 (≥ E288U...)	SSPA0458		
12	Gas tap burner 1x			
	Production date: < A (Refer to page 4)	SSPA0432		
	Production date: ≥ B (Refer to page 4)	SSPA0430		
	Production date: ≥ 15-10-2017 (≥ E288U...)	SSPA0433		
13	Hotplate switch	SSPA0580		
14	Control knobs	Refer to page 4		
15	Spark ignition switch	SSPA0381		
16	Light switch *not all models	SSPA0590		
17	Oven door seal	SSPA0062		
18	Oven door	Refer to page 5		
19	Glass, inner door	SSPA0253		
20	Oven shelf 1x	SSPA0982		
21	Grill pan	SSPA0993		
22	Spark generator			
	Production date: < A (See Table page 4)	SSPA0303		
	Production date: ≥ B (See Table page 4)	SSPA0300		



		Spare part number	Spare part number	Colours available
23	Electrode oven	SSPA0626 ≥ 06-12-16 (E340T...)	SSPA0606 < 06-12-16 (E340T...) Modification kit	
24	Thermocouple oven			
25	Thermocouple grill	SSPA0627 ≥ 06-12-16 (E340T...)		
26	Electrode grill	SSPA0694 ≥ 29-01-24 (E072A...)		
27	Grill shut off	SSPA0605		
28	Grill burner			
	Production date: < 26-04-16 (E299S...)	Not available		
	Production date: ≥ 27-04-16 (E299S...)	SSPA0185		
	Production date: ≥ 29-04-24	SSPA01104 SSPA0188		
29	Oven Burner	SSPA0191		

~~XXXXX~~ = not available anymore

Production date table

Cooker	Production date A	Production date B
SOG71920	< 27/05/2015 (E147S...)	≥ 28/05/2015 (E148S...)
SOG71921	< 27/05/2015 (E147S...)	≥ 28/05/2015 (E148S...)
SOG71915	< 30/11/2014 (E334R...)	≥ 01/12/2014 (E335R...)
Other	< 27/05/2015 (E147S...)	≥ 28/05/2015 (E148S...)

Control knobs

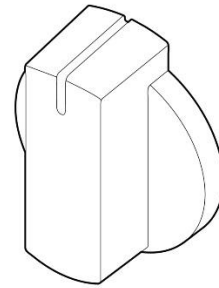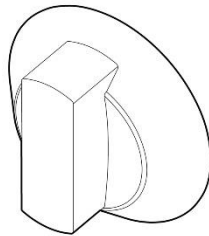


Spare part number	SSPA0936	SSPA0901
Colours available	Chrome(.CR) Satin (.SA)	Matt Nickel (.MNK)
Set quantity	5	6

Cladding styles


No cladding



Side cladding

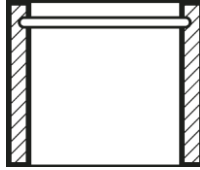


Behind handle cladding

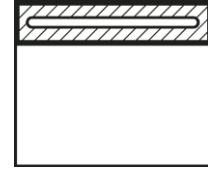

Oven door styles

Drop down oven door

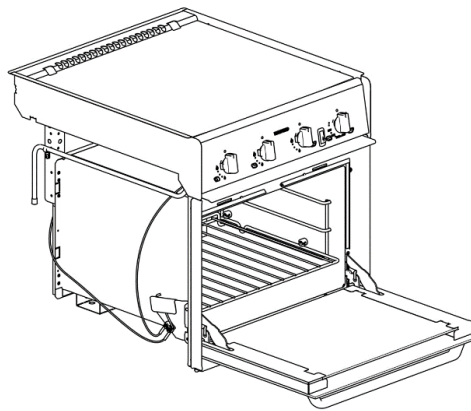

Oven doors

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Handle colour
SMAO3435.BK/SVS1X	Clear	Black	No	N/A		Stainless
SMAO3435.BK1X	Clear	Black	No	N/A		Stainless
SMAO3435.BK5X	Clear	Black	Yes	Sides		Stainless
SMAO3435.BK14X	Clear	Black	Yes	Sides		Brushed Nickel
SMAO3435.BK16X	Clear	Black	No	N/A		Chrome
SMAO3435.BK19X	Clear	Black	Yes	N/A		Stainless
SMAO3435.BK20X	Clear	Black	No	N/A		Black
SMAO3435.BK21X	Clear	Black	Yes	Sides		Brushed Nickel
SMAO3435.BK22X	Clear	Black	No	N/A		Chrome
SMAO3435.BK23X	Clear	Black	No	N/A		Chrome
SMAO3435.MIR6X	Mirror	N/A	No	N/A		Brushed Nickel

~~XXXXX~~ = not available anymore