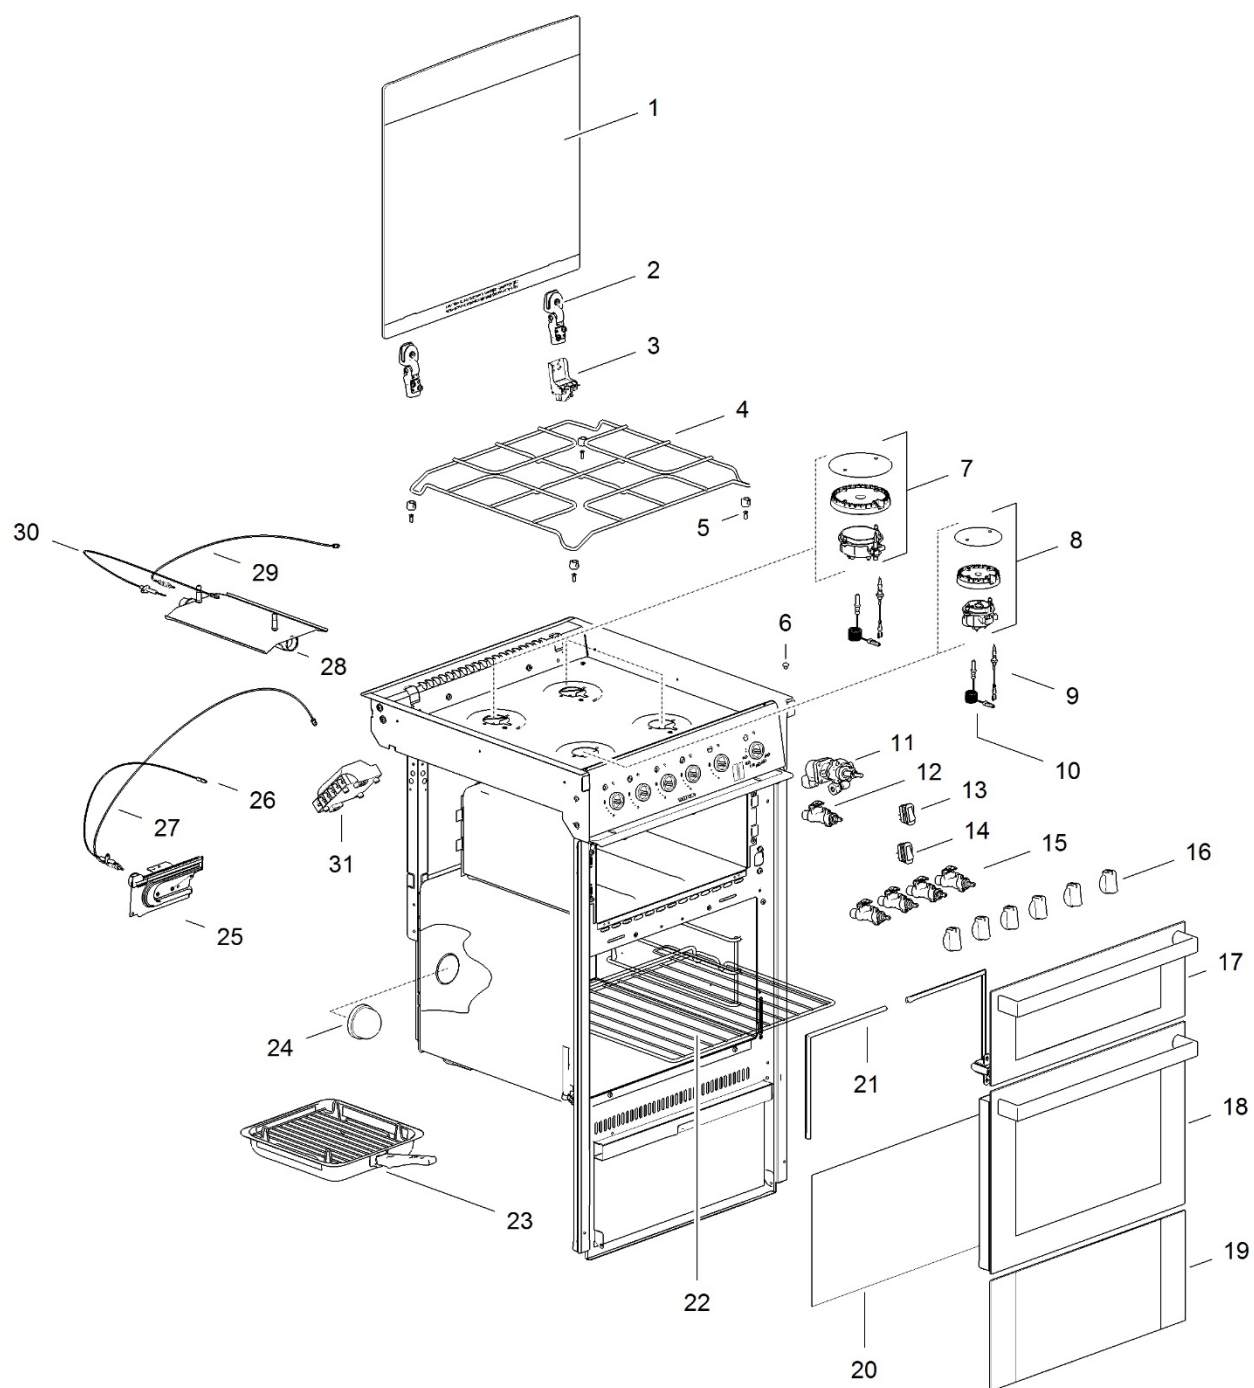


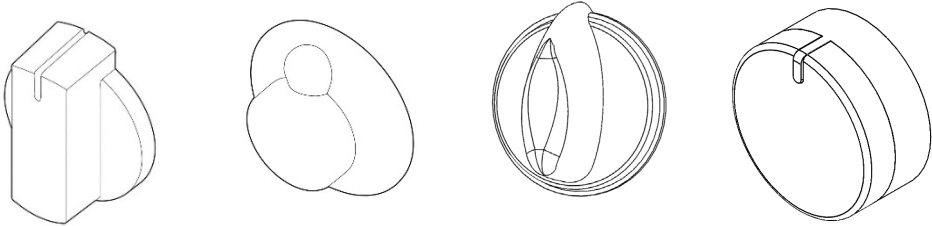


LE1317_SOH72XXX

		Spare part number	Spare part number	Colours available
1	Glass lid (BK : smoked black clear)	SSPA0234		.BK
	Glass lid (SBK : solid black)	SSPA0233		.SBK
2	Glass lid hinges (2x)	SSPA0010		
3	Shut off assy (incl. nr 9)	SSPA0600		
4	Pan support	SSPA0964		
5	Pan support clips (4x)	SSPA0041		
	Pan support clips (50x)	SSPA0042		
6	Bump stops (2x)	SSPA0040		
7	Burner assy medium	SSPA0117		
8	Burner assy small	SSPA0103		
9	Thermocouples hob		For lid shut off	
	Front left	SSPA0675	SSPA0671	
	Front right	SSPA0675	SSPA0671	
	Rear left	SSPA0675	SSPA0671	
	Rear right	SSPA0676	SSPA0670	
10	Spark electrode (4x)	SSPA0310		
11	Gas tap oven	SSPA0452		
12	Gas tap grill	SSPA0472		
13	Spark ignition button (=incl. switch)	SSPA0381		
14	Light switch <i>*not all models</i>	SSPA0591		
15	Gas tap burner (1x)	SSPA0432		
16	Control knobs	Refer to page 3		
17	Grill door (without handle)	Refer to page 3		
18	Oven door (without handle/hinges)	Refer to page 4		
19	Lower door <i>*only for 3/4 height</i>	Refer to page 4		
20	Glass, inner door	SSPA0253		
21	Oven door seal	SSPA0062		
22	Oven shelf	SSPA0980		
23	Grill pan	SSPA0991		
24	Oven lamp <i>*not all models</i>	SSPA0560		
25	Oven burner			
	Production date: < 31-07-21 (E212Y...)	SSPA0191		
	Production date: ≥ 01-08-21 (E213Y...)	SSPA0198		
26	Thermocouple oven	SSPA0642		
27	Electrode oven	SSPA0321		
28	Grill burner			
	Production date: < 13-04-2015 (< E103S....)	Not available		
	Production date: ≥ 14-04-2015 (≥ E104S....)	SSPA0185		
29	Thermocouple grill			
	Production date: < 01-07-2015 (< E182S....)	SSPA0643		
	Production date: ≥ 02-07-2015 (≥ E183S....)	SSPA0644		
30	Electrode grill	SSPA0321		
31	Spark generator	SSPA0399		

XXXXX = not available anymore

Control knobs

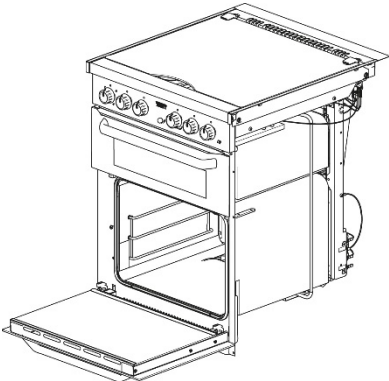
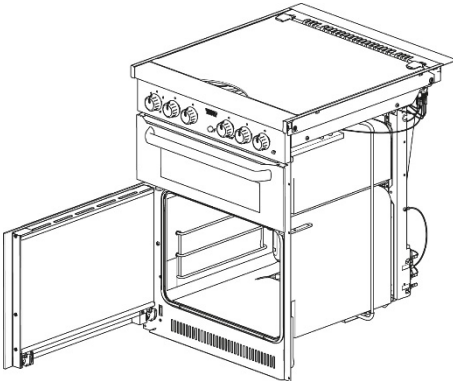
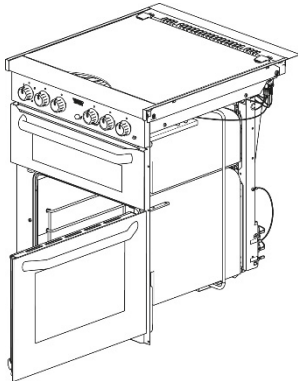
Control Knob sets				
	SSPA0901	SSPA0903	SSPA0906	SSPA0907
Colours available	Matt Nickel (.MNK) Black (.BK) Gloss Nickel (.GNK)	Satin (.SA)	Satin (.SA)	Satin (.SA) Chrome (.CR)
Set quantity	6	6	6	6

Handles are being supplied separately; hinges only where applicable

Grill doors (without handle)

Spare part number	Glass	Print	Cladding	Cladding Position	Handle Style	Hinges
SMAO3425.MIR99X	Clear	Mirror	No	N/A	N/A	Yes
SMAO3425.BK99X	Clear	Black	No	N/A	N/A	Yes

Oven door styles

Drop down oven doors	Left hinged oven doors	Right hinged oven doors
		

Drop down oven doors (without handle/hinges)

Spare part number	Glass	Print	Cladding	Cladding Position	Handle Style	Hinges
SMAO3445.BK/SVS99X	Clear	Faded dots	No	N/A	N/A	SSPA1791
SMAO3445.MIR99X	Clear	Mirror	No	N/A	N/A	SSPA1791
SMAO3445.BK99X	Clear	Black	No	N/A	N/A	SSPA1791

Handles grill and oven doors

Spare part number	Centres (mm) handle fixings	Handle Style	Handle Colour
SSPA1053 HANDLE.T-BAR 12mm	390 CRS		Stainless
SSPA1056 HANDLE ALPS 60-CHROME OX	390 CRS		Chrome
SSPA1060 HANDLE. V CUT. BRIGHT NICKEL	390 CRS		Nickel
SSPA1061 HANDLE. V CUT. BRIGHT CHROME	390 CRS		Chrome

Lower doors

Spare part number	Glass	Print	Cladding	Cladding Position	Handle Style	Handle Colour
SMAO3460.SSX	Clear	Black	No	N/A	N/A	N/A
SMAO3460.MIRX	Clear	Mirror	No	N/A	N/A	N/A
SMAO3460.BKX	Clear	Black	No	N/A	N/A	N/A

~~XXXXX~~ = not available anymore