


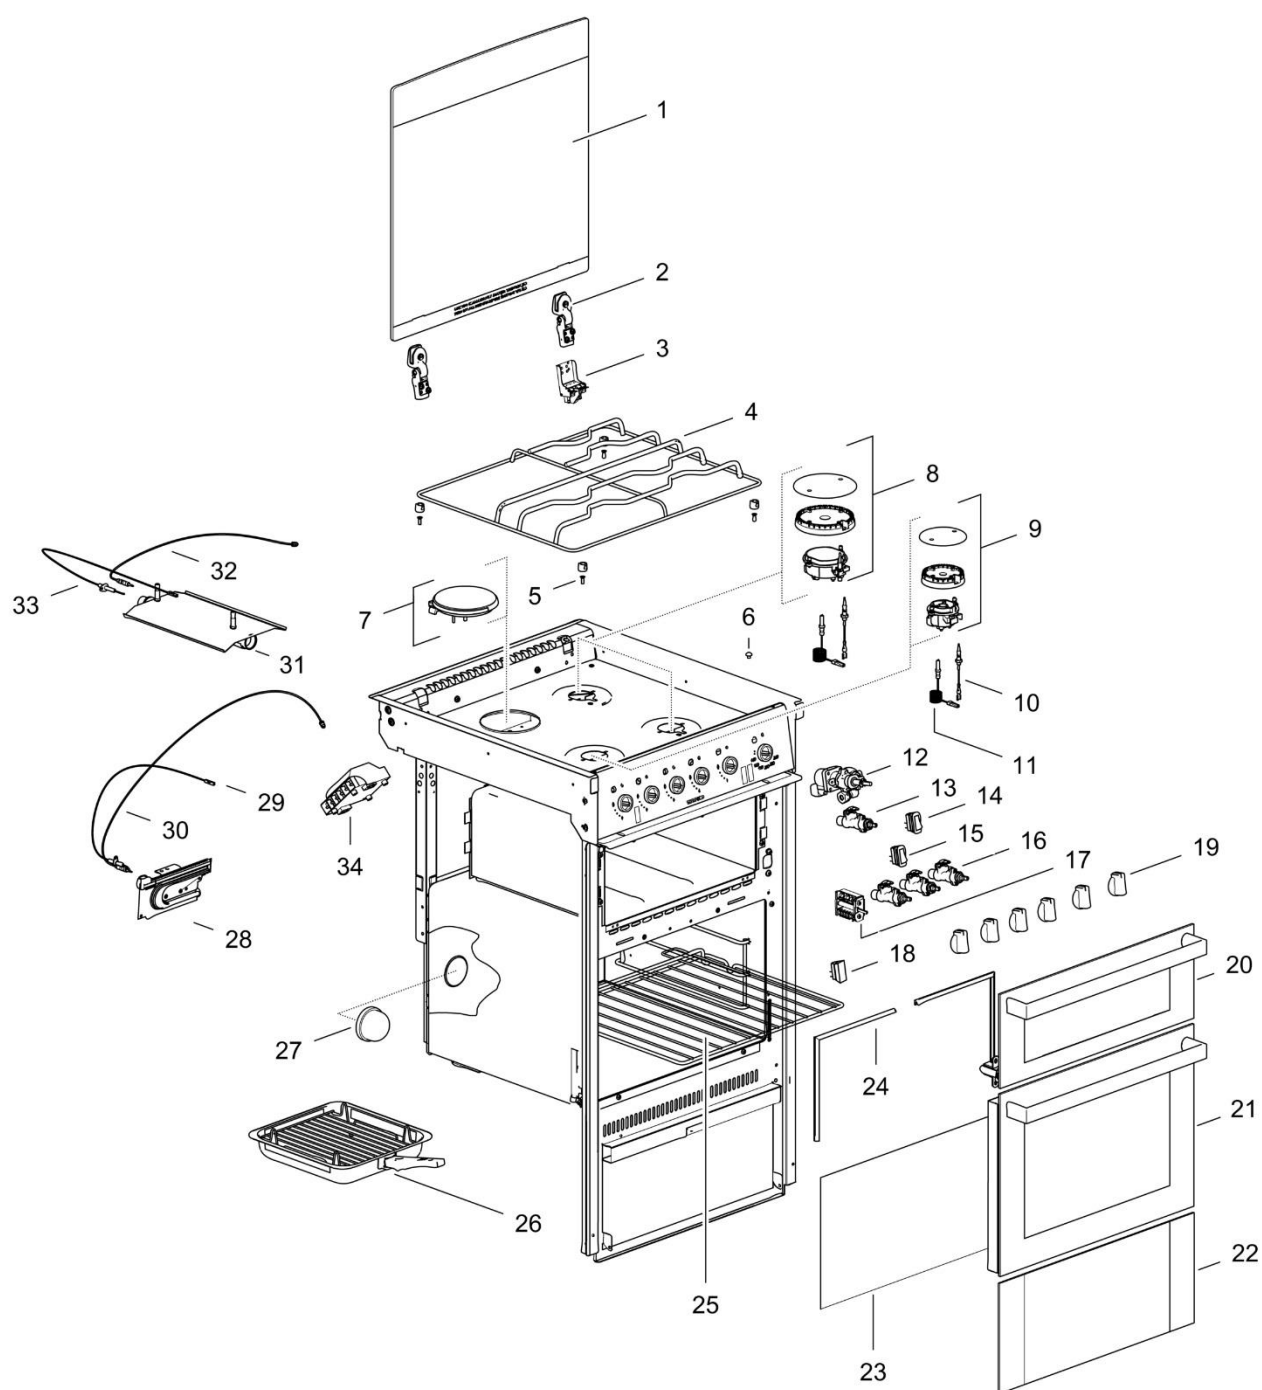




LE1362_SOH73XXX

		Spare part number	Spare part number	Colours available
1	Glass lid (BK : smoked black clear)	SSPA0234		.BK
	Glass lid (SBK : solid black)	SSPA0233		.SBK
2	Glass lid hinges (2x)	SSPA0010		
3	Shut off assy (incl. nr 10)	SSPA0600		
4	Pan support	SSPA0969		
5	Pan support clips (4x)	SSPA0041		
	Pan support clips (50x)	SSPA0042		
6	Bump stops (2x)	SSPA0040		
7	Hotplate 800W	SSPA0550		
	Hotplate 1000W	SSPA0551		
8	Burner assy medium	SSPA0117		
9	Burner assy small	SSPA0103		
10	Thermocouples hob		For lid shut off	
	Front left	SSPA0675	SSPA0671	
	Front right	SSPA0675	SSPA0671	
	Rear left	n.a.	n.a.	
	Rear right	SSPA0676	SSPA0670	
11	Spark electrode (4x)	SSPA0310		
12	Gas tap oven	SSPA0452		
13	Gas tap grill	SSPA0472		
14	Spark ignition button (incl. switch)	SSPA0381		
15	Light switch <i>*not all models</i>	SSPA0591		
16	Gas tap burner (1x)	SSPA0432		
17	Hotplate switch	SSPA0580		
18	Lamp, indicator hot plate	SSPA0561		
19	Control knobs	Refer to page 3		
20	Grill door (without handle)	Refer to page 3		
21	Oven door (without handle)	Refer to page 4		
22	Lower door <i>*only for 3/4 height</i>	Refer to page 5		
23	Glass, inner door	SSPA0253		
24	Oven door seal	SSPA0062		
25	Oven shelf	SSPA0980		
26	Grill pan	SSPA0991		
27	Oven lamp <i>*not all models</i>	SSPA0560		
28	Oven burner			
	Production date: < 31-07-21 (E212Y...)	SSPA0191		
	Production date: ≥ 01-08-21 (E213Y...)	SSPA0198		
29	Thermocouple oven	SSPA0642		
30	Electrode oven	SSPA0321		
31	Grill burner			
	Production date: < 13-04-2015 (>E103S....)	Not available		
	Production date: ≥ 14-04-2015 (<E104S....)	SSPA0185		

		Spare part number	Spare part number	Colours available
32	Thermocouple grill			
	<i>Production date: < 01-07-2015 (<E182S....)</i>	SSPA0643		
	<i>Production date: ≥ 02-07-2015 (>E183S....)</i>	SSPA0644		
33	Electrode grill	SSPA0321		
34	Spark generator	SSPA0399		

Control Knobs

Control Knob sets

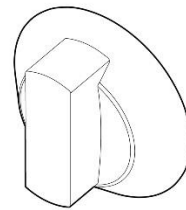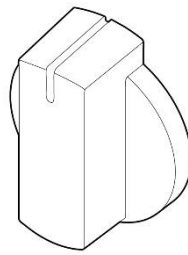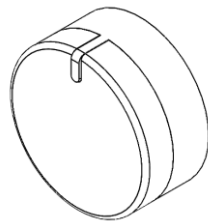

Spare part number	SSPA0933	SSPA0901	SSPA0902
Colours available	Chrome (.CR) Capped Knobs	Gloss Nickel (.GNK) Matt Nickel (.MNK) Satin Chrome (.SCR)	Chrome (.CR) Satin (.SA)
Set quantity	6	6	6


Handles are being supplied separately; hinges only where applicable

Grill Doors (without handle)


Spare part number	Glass	Print	Cladding	Cladding Position	Handle Style	Hinges
SMAO3425.MIR99X	Clear	Mirror	No	N/A	N/A	Yes
SMAO3425.BK99X	Clear	Black	No	N/A	N/A	Yes

Oven door styles


Drop down oven doors

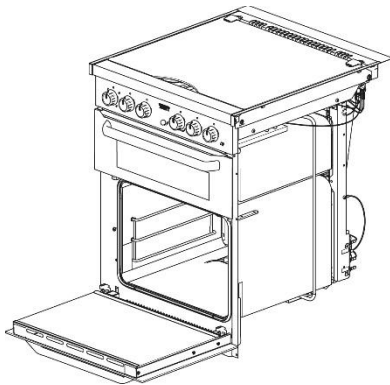

Left hinged oven doors

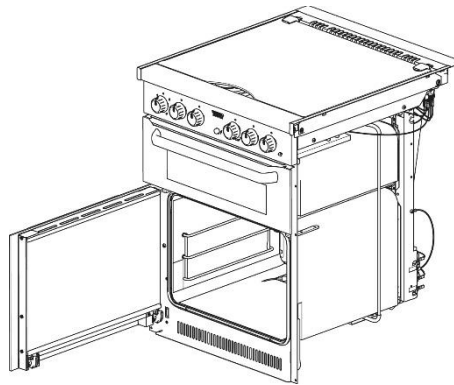

Right hinged oven doors

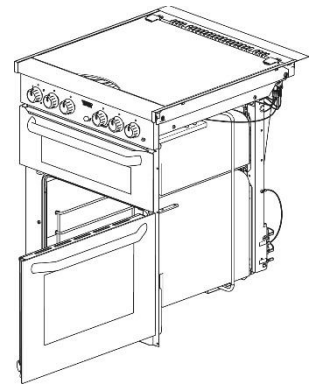

Drop down oven doors (without handle and hinges)

Spare part number	Glass	Print	Cladding	Cladding Position	Handle Style	Hinges
SMAO3445.BK/SVS99X	Clear	Faded dots	No	N/A	N/A	SSPA1791
SMAO3445.MIR99X	Clear	Mirror	No	N/A	N/A	SSPA1791
SMAO3445.BK99X	Clear	Black	No	N/A	N/A	SSPA1791

Handle oven doors

Spare part number	Centres (mm) handle fixings	Handle Style	Handle Colour
SSPA1050 HANDLE PULL BOSS 418MM LONG SS	390 CRS		Stainless
SSPA1053 HANDLE.T-BAR 12mm	390 CRS		Stainless
SSPA1056 HANDLE ALPS 60-CHROME OX	390 CRS		Chrome
SSPA1060 HANDLE. V CUT. BRIGHT NICKEL	390 CRS		Nickel

Lower doors						
Spare part number	Glass	Print	Cladding	Cladding Position	Handle Style	Handle Colour
SMAO3460.SSX	Clear	Black	No	N/A	N/A	N/A
SMAO3460.MIRX	Clear	Mirror	No	N/A	N/A	N/A
SMAO3460.BKX	Clear	Black	No	N/A	N/A	N/A

~~XXXXX~~ = not available anymore