


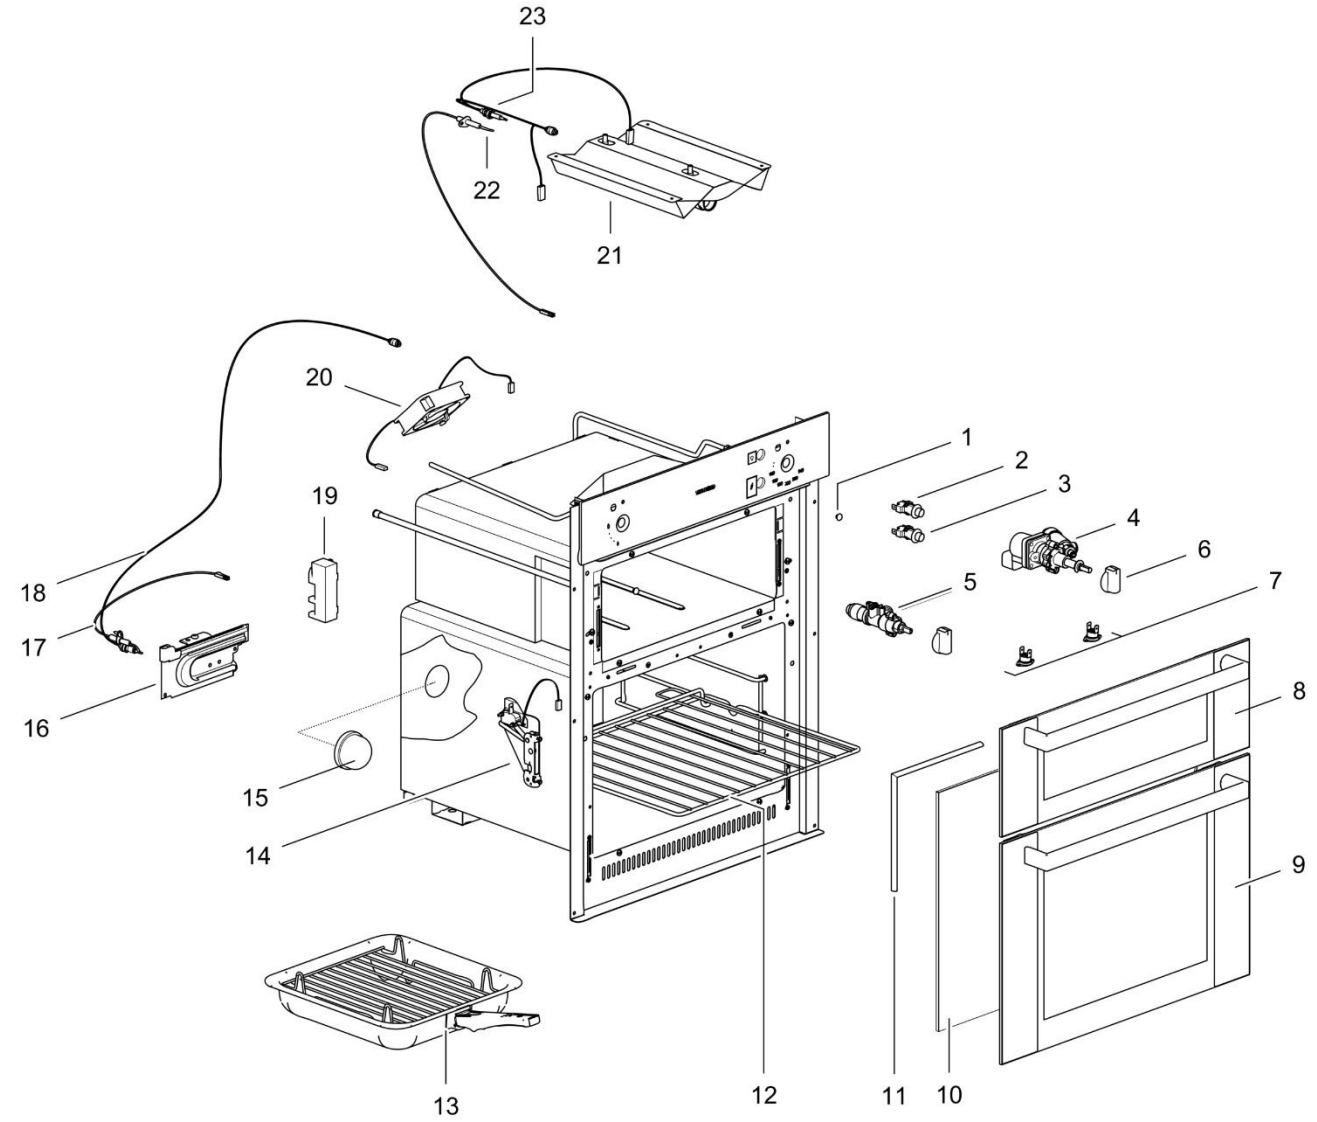


LE1311_SOP139XX

		Spare part number	Spare part number	Colours available
1	Grill door bump	SSPA0040		
2	Light switch	SSPA0590		
3	Ignition switch	SSPA0380		
4	Oven tap			
	Production Date: < 20/03/11 (E079M...)	SSPA0452		
	Production Date: ≥ 21/03/11 (E080M...)	SSPA0451		
5	Grill tap			
	Production Date: < 20/03/11 (E079M...)	SSPA0472		
	Production Date: ≥ 21/03/11 (E080M...)	SSPA0470		
	Production Date: ≥ 01/10/2022 (E274Z..)	SSPA0474		
6	Knob	Refer to page 3		
7	Cut out thermal (1x NO and 1x NC)	SSPA0510		
8	Grill door	Refer to page 4		
9	Oven door	Refer to page 5		
10	Glass, inner door	SSPA0253		
11	Oven seal	SSPA0062		
12	Oven shelf	SSPA0980		
13	Grill pan	SSPA0991		
14	Shut off			
	Production Date: < 28/11/11 (E087M...)	Not available		
	Production Date: ≥ 29/11/11 (E333M...)	SSPA0605		
15	Oven lamp*	SSPA0560		
16	Oven burner			
	Production date: < 31-07-21 (E212Y...)	SSPA0191		
	Production date: ≥ 01-08-21 (E213Y...)	SSPA0198		
17	Thermocouple oven			
	Production Date: < 20/03/11 (E079M...)	SSPA0642		
	Production Date: ≥ 21/03/11 (E080M...)		SSPA0623	
18	Electrode oven	SSPA0321		
19	Spark generator	See Page 3		
20	Fan			
	Production Date: < 29/02/16 (E060T...)	SSPA0520		
	Production Date: ≥ 01/03/16 (E061T...)	SSPA0522		
21	Grill burner			
	Production Date: ≤ 26/04/15 (E116S...)	Not available		
	Production Date: ≥ 27/04/15 (E117S...)	SSPA0185		
22	Thermocouple and electrode grill			
	Production Date: < 23/03/11 (E082M...)	SSPA0624		
	Production Date: ≥ 24/03/11 (E083M...)	SSPA0630		
	Production Date: ≥ 28/11/11 (E332M...)	SSPA0625		
	Production Date: ≥ 24/03/13 (E083P...)	SSPA0631		


* Only applicable for models with light inside

~~XXXX~~ is not available anymore

Control knobs

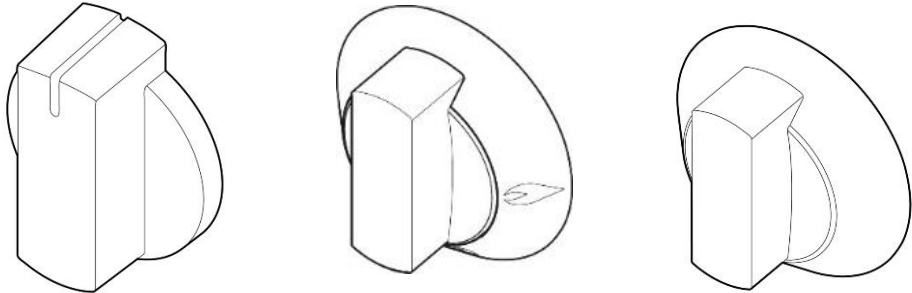Control Knob			
	Spare part number	SSPA0911	SSPA0934
	Colours available	Matt Nickel (.MNK)	Chrome (.CR) Satin (.SA)
	Set quantity	3	2

Control knobs

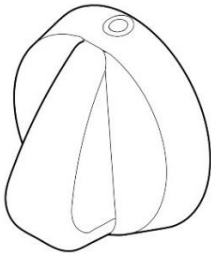
Control Knob	
	Spare part number
	SSPA0939
	Colours available
	Black (.BK)
	Set quantity
	4

Spark generators


	
	Description
	2 terminals, 4 blanks
	6 terminals
	Spare part number
	SSPA0302
	SSPA0301

Cladding styles


No cladding

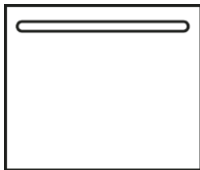

Side cladding

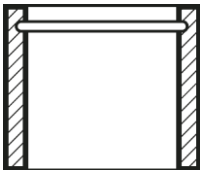

Behind handle cladding

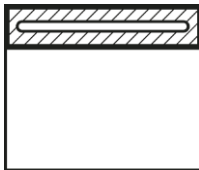


Grill doors


Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Handle colour
SMAO4120.BKX	Clear	Black	Yes	Sides		BNK
SMAO4120.BK5X	Clear	Black	No	N/A		BNK
SMAO4120.BK6X	Clear	Black	No	N/A		Black
SMAO4120.BK7X	Clear	Black	No	N/A		Chrome

Oven door styles

Left hinged oven doors

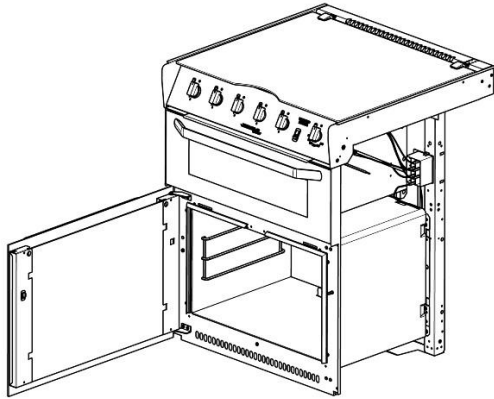

Right hinged oven doors

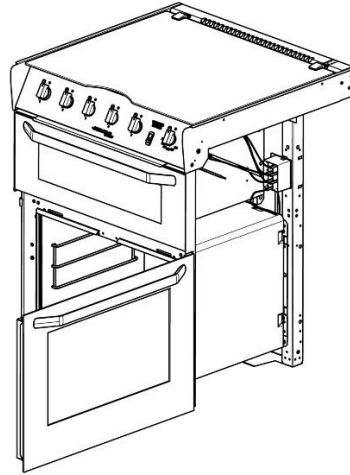

Drop Down oven doors

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Handle colour
SMAO4130.BKX	Clear	Black	Yes	Sides		BNK
SMAO4130.BK5X	Clear	Black	No	N/A		BNK
SMAO4130.BK6X	Clear	Black	No	N/A		Black
SMAO4130.BK7X	Clear	Black	No	N/A		Chrome

Left hinged oven doors

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Handle colour
SMAO4135.BK6LX	Clear	Black	No	N/A		Black
SMAO4135.BK7LX	Clear	Black	No	N/A		Chrome

Right hinged oven doors

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Handle colour
SMAO4135.BK6RX	Clear	Black	No	N/A		Black
SMAO4135.BK7RX	Clear	Black	No	N/A		Chrome