


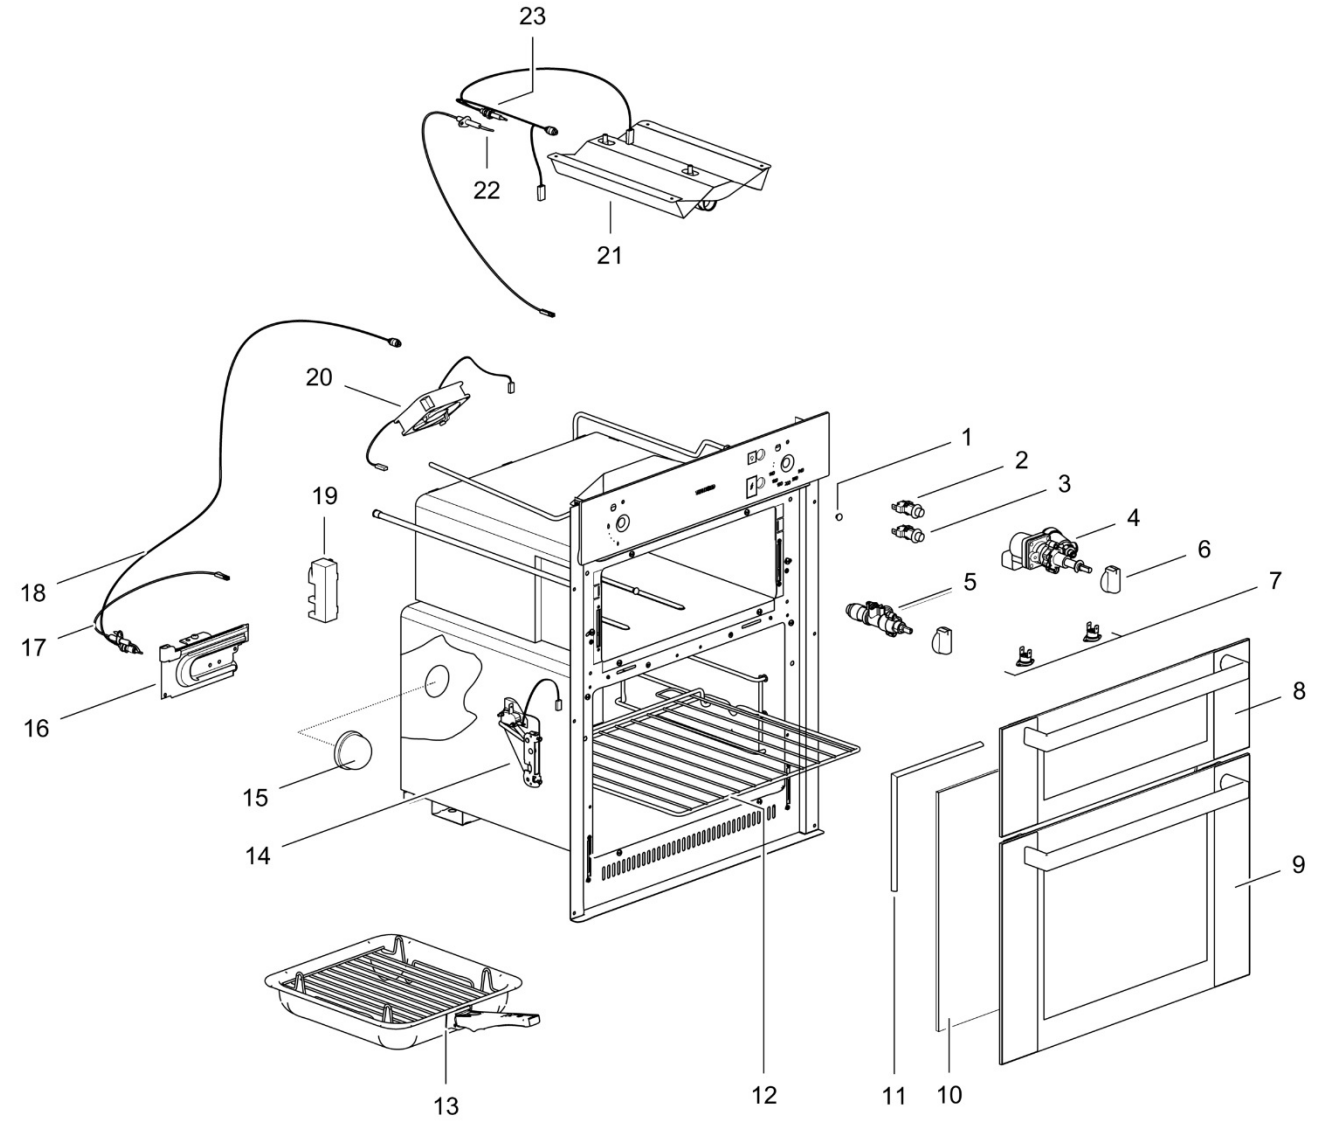


LE1311_SOP139XX

		Spare part number	Spare part number	Colours available
1	Grill door bump	SSPA0040		
2	Light switch	SSPA0590		
3	Ignition switch	SSPA0380		
4	Oven tap			
	Production Date: < 20/03/11 (E079M...)	SSPA0452		
	Production Date: ≥ 21/03/11 (E080M...)	SSPA0451		
5	Grill tap			
	Production Date: < 20/03/11 (E079M...)	SSPA0472		
	Production Date: ≥ 21/03/11 (E080M...)	SSPA0470		
	Production Date: ≥ 01/10/2022 (E274Z..)	SSPA0474		
6	Control knobs	Refer to page 3		
7	Cut out thermal (1x NO and 1x NC)	SSPA0510		
8	Grill door (without handle/hinges)	Refer to page 4		
9	Oven door (without handle/hinges)	Refer to page 4		
10	Glass, inner door	SSPA0253		
11	Oven seal	SSPA0062		
12	Oven shelf	SSPA0980		
13	Grill pan	SSPA0991		
14	Shut off			
	Production Date: < 28/11/11 (E087M...)	Not available		
	Production Date: ≥ 29/11/11 (E333M...)	SSPA0605		
15	Oven lamp*	SSPA0560		
16	Oven burner			
	Production date: < 31-07-21 (E212Y...)	SSPA0191		
	Production date: ≥ 01-08-21 (E213Y...)	SSPA0198		
17	Thermocouple oven			
	Production Date: < 20/03/11 (E079M...)	SSPA0642		
	Production Date: ≥ 21/03/11 (E080M...)		SSPA0623	
18	Electrode oven	SSPA0321		
19	Spark generator	See Page 3		
20	Fan			
	Production Date: < 29/02/16 (E060T...)	SSPA0520		
	Production Date: ≥ 01/03/16 (E061T...)	SSPA0522		
21	Grill burner			
	Production Date: ≤ 26/04/15 (E116S...)	Not available		
	Production Date: ≥ 27/04/15 (E117S...)	SSPA0185		
22	Thermocouple and electrode grill			
	Production Date: < 23/03/11 (E082M...)	SSPA0624		
	Production Date: ≥ 24/03/11 (E083M...)	SSPA0630		
	Production Date: ≥ 28/11/11 (E332M...)	SSPA0625		
	Production Date: ≥ 24/03/13 (E083P...)	SSPA0631		


* Only applicable for models with light inside

XXXX is not available anymore

Control knobs

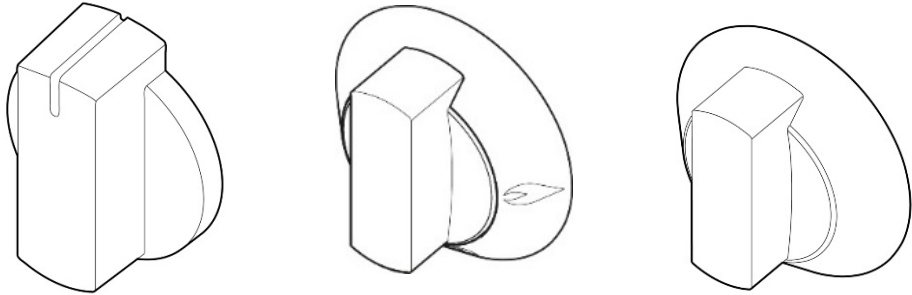Control Knob			
	Spare part number	SSPA0911	SSPA0934
	Colours available	Matt Nickel (.MNK)	Chrome (.CR) Satin (.SA)
	Set quantity	3	2
SSPA0937			
Chrome (.CR)			

Control knobs

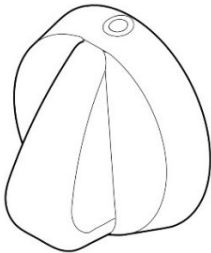Control Knob			
	Spare part number	SSPA0939	
	Colours available	Black (.BK)	
	Set quantity	4	

Spark generators

		
	Description	2 terminals, 4 blanks
	Spare part number	SSPA0302
		SSPA0301


Handles are being supplied separately; hinges only where applicable

Grill doors (without handle and hinges)


Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Hinges
SMAO4120.BK95X	Clear	Black	Yes	Sides	N/A	SSPA0014
SMAO4120.BK99X	Clear	Black	No	N/A	N/A	SSPA0014

Oven door styles

Left hinged oven doors

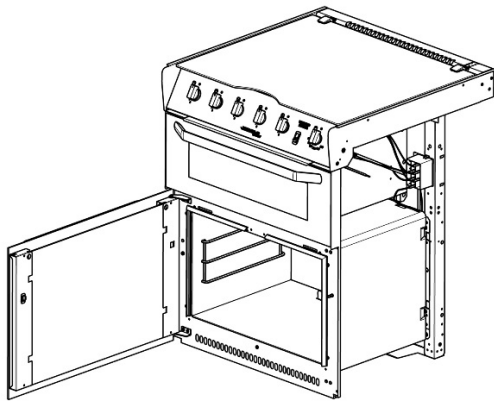

Right hinged oven doors

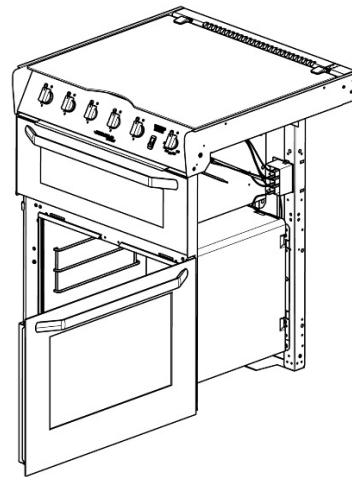

Drop Down oven doors (without handle and hinges)

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Hinges
SMAO4130.BK95X	Clear	Black	Yes	Sides	N/A	SSPA1791
SMAO4130.BK99X	Clear	Black	No	N/A	N/A	SSPA1791

Left hinged oven doors (without handle)

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Hinges
SMAO4135.BK99X	Clear	Black	No	N/A	N/A	Yes
SMAO4135.BK95X	Clear	Black	Yes	Sides	N/A	Yes

Right hinged oven doors (without handle)

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Hinges
SMAO4135.BK99X	Clear	Black	No	N/A	N/A	Yes
SMAO4135.BK95X	Clear	Black	Yes	Sides	N/A	Yes

Handles grill and oven doors

Spare part number	Centres (mm) handle fixings	Handle Style	Handle Colour
SSPA1060 HANDLE. V CUT. BRIGHT NICKEL	390 CRS		Bright Nickel
SSPA1064 HANDLE HEADON BLACK	390 CRS		Black